

## MaxiDas\_Daihatsu\_V1.10 Function List (Note:For reference only)

**NOTES:**

- This function is supported.                      ※ This function may be supported, which depends on the actual condition of the vehicle.
  - This function is not supported.                ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

| Vehicle Name | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| YRV          | '00/08 (H12/08) - '00/12 (H12/12) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| YRV          | '00/08 (H12/08) - '00/12 (H12/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| YRV          | '00/08 (H12/08) - '00/12 (H12/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| YRV          | '00/08 (H12/08) - '00/12 (H12/12) | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| YRV          | '00/08 (H12/08) - '00/12 (H12/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| YRV          | '00/08 (H12/08) - '00/12 (H12/12) | KFS         | ●          | ●           | ○            | ○         | ○           |                          |
| YRV          | '00/12 (H12/12) -                 | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| YRV          | '00/12 (H12/12) -                 | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| YRV          | '00/12 (H12/12) -                 | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| YRV          | '00/12 (H12/12) -                 | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| YRV          | '00/12 (H12/12) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| YRV          | '00/12 (H12/12) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '01/01 (H13/01) - '02/01 (H14/01) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Atrai Wagon  | '01/01 (H13/01) - '02/01 (H14/01) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '01/01 (H13/01) - '02/01 (H14/01) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '01/01 (H13/01) - '02/01 (H14/01) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '02/01 (H14/01) - '03/05 (H15/05) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Atrai Wagon  | '02/01 (H14/01) - '03/05 (H15/05) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '02/01 (H14/01) - '03/05 (H15/05) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '02/01 (H14/01) - '03/05 (H15/05) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '02/01 (H14/01) - '03/05 (H15/05) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '03/05 (H15/05) - '05/04 (H17/04) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Atrai Wagon  | '03/05 (H15/05) - '05/04 (H17/04) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '03/05 (H15/05) - '05/04 (H17/04) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Atrai Wagon  | '03/05 (H15/05) - '05/04 (H17/04) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '03/05 (H15/05) - '05/04 (H17/04) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '05/05 (H17/05) - '07/08 (H19/08) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Atrai Wagon  | '05/05 (H17/05) - '07/08 (H19/08) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Atrai Wagon  | '05/05 (H17/05) - '07/08 (H19/08) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai Wagon  | '07/08 (H19/08) - '10/08 (H22/08) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |

| Vehicle Name               | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|----------------------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Atrai Wagon                | '07/08 (H19/08) -' 10/08 (H22/08) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Atrai Wagon                | '07/08 (H19/08) -' 10/08 (H22/08) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai 7 / Hijet Gran Cargo | '00/07 (H12/07) -' 01/06 (H13/06) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Atrai 7 / Hijet Gran Cargo | '00/07 (H12/07) -' 01/06 (H13/06) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai 7 / Hijet Gran Cargo | '00/07 (H12/07) -' 01/06 (H13/06) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Atrai 7 / Hijet Gran Cargo | '00/07 (H12/07) -' 01/06 (H13/06) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai 7 / Hijet Gran Cargo | '00/07 (H12/07) -' 01/06 (H13/06) | KFS         | ●          | ●           | ○            | ○         | ○           |                          |
| Atrai 7 / Hijet Gran Cargo | '01/06 (H13/06) -                 | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Atrai 7 / Hijet Gran Cargo | '01/06 (H13/06) -                 | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai 7 / Hijet Gran Cargo | '01/06 (H13/06) -                 | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Atrai 7 / Hijet Gran Cargo | '01/06 (H13/06) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Atrai 7 / Hijet Gran Cargo | '01/06 (H13/06) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Artis                      | '00/03 (H12/03) -' 01/09 (H13/09) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Artis                      | '00/03 (H12/03) -' 01/09 (H13/09) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Artis                      | '00/03 (H12/03) -' 01/09 (H13/09) | EFI&A/T     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Artis                      | '01/09 (H13/09) -' 06/01 (H18/01) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Artis                      | '01/09 (H13/09) -' 06/01 (H18/01) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Artis                      | '01/09 (H13/09) -' 06/01 (H18/01) | EFI&A/T     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Artis                      | '06/01 (H18/01) -' 09/01 (H21/01) | EFI&A/T     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Artis                      | '09/01 (H21/01) -                 | EFI&A/T     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Esse                       | '05/12 (H17/12) -' 10/04 (H22/04) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Esse                       | '05/12 (H17/12) -' 10/04 (H22/04) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Esse                       | '05/12 (H17/12) -' 10/04 (H22/04) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Esse                       | '10/04 (H22/04) -                 | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Esse                       | '10/04 (H22/04) -                 | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Esse                       | '10/04 (H22/04) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Optimistic                 | '00/10 (H12/10) -' 01/06 (H13/06) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Optimistic                 | '00/10 (H12/10) -' 01/06 (H13/06) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Optimistic                 | '00/10 (H12/10) -' 01/06 (H13/06) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Optimistic                 | '00/10 (H12/10) -' 01/06 (H13/06) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Optimistic                 | '00/10 (H12/10) -' 01/06 (H13/06) | DVS         | ●          | ●           | ○            | ●         | ●           |                          |
| Optimistic                 | '00/10 (H12/10) -' 01/06 (H13/06) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Optimistic                 | '01/06 (H13/06) -' 02/08 (H14/08) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Optimistic                 | '01/06 (H13/06) -' 02/08 (H14/08) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Optimistic                 | '01/06 (H13/06) -' 02/08 (H14/08) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Optimistic                 | '01/06 (H13/06) -' 02/08 (H14/08) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Optimistic                 | '01/06 (H13/06) -' 02/08 (H14/08) | DVS         | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name | Year                             | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Optimistic   | '01/06 (H13/06) -'02/08 (H14/08) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Coup         | '06/05 (H18/05) -'10/07 (H22/07) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Coup         | '06/05 (H18/05) -'10/07 (H22/07) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Coup         | '06/05 (H18/05) -'10/07 (H22/07) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Coup         | '06/05 (H18/05) -'10/07 (H22/07) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Coup         | '06/05 (H18/05) -'10/07 (H22/07) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Coup         | '06/05 (H18/05) -'10/07 (H22/07) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Coup         | '06/05 (H18/05) -'10/07 (H22/07) | VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Coup         | '10/07 (H22/07) -                | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Coup         | '10/07 (H22/07) -                | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Coup         | '10/07 (H22/07) -                | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Coup         | '10/07 (H22/07) -                | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Coup         | '10/07 (H22/07) -                | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Coup         | '10/07 (H22/07) -                | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Coup         | '10/07 (H22/07) -                | VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Copen        | '02/06 (H14/06) -'10/08 (H22/08) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Copen        | '02/06 (H14/06) -'10/08 (H22/08) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Copen        | '02/06 (H14/06) -'10/08 (H22/08) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Copen        | '02/06 (H14/06) -'10/08 (H22/08) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Copen        | '02/06 (H14/06) -'10/08 (H22/08) | IMB         | ●          | ●           | ○            | ○         | ○           |                          |
| Copen        | '02/06 (H14/06) -'10/08 (H22/08) | Roof        | ●          | ●           | ○            | ●         | ●           |                          |
| Copen        | '10/08 (H22/08) -                | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Copen        | '10/08 (H22/08) -                | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Copen        | '10/08 (H22/08) -                | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Copen        | '10/08 (H22/08) -                | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Copen        | '10/08 (H22/08) -                | IMB         | ●          | ●           | ○            | ○         | ○           |                          |
| Copen        | '10/08 (H22/08) -                | Roof        | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '00/05 (H12/05) -'00/12 (H12/12) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Storia       | '00/05 (H12/05) -'00/12 (H12/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '00/05 (H12/05) -'00/12 (H12/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Storia       | '00/05 (H12/05) -'00/12 (H12/12) | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Storia       | '00/05 (H12/05) -'00/12 (H12/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '00/05 (H12/05) -'00/12 (H12/12) | KFS         | ●          | ●           | ○            | ○         | ○           |                          |
| Storia       | '00/12 (H12/12) -'02/01 (H14/01) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Storia       | '00/12 (H12/12) -'02/01 (H14/01) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '00/12 (H12/12) -'02/01 (H14/01) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Storia       | '00/12 (H12/12) -'02/01 (H14/01) | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |

| Vehicle Name | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Storia       | '00/12 (H12/12) -' 02/01 (H14/01) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '00/12 (H12/12) -' 02/01 (H14/01) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '02/01 (H14/01) -' 02/08 (H14/08) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Storia       | '02/01 (H14/01) -' 02/08 (H14/08) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '02/01 (H14/01) -' 02/08 (H14/08) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Storia       | '02/01 (H14/01) -' 02/08 (H14/08) | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Storia       | '02/01 (H14/01) -' 02/08 (H14/08) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '02/01 (H14/01) -' 02/08 (H14/08) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '02/08 (H14/08) -                 | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Storia       | '02/08 (H14/08) -                 | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '02/08 (H14/08) -                 | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Storia       | '02/08 (H14/08) -                 | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Storia       | '02/08 (H14/08) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Storia       | '02/08 (H14/08) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Sonica       | '06/06 (H18/06) -' 09/04 (H21/04) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Sonica       | '06/06 (H18/06) -' 09/04 (H21/04) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Sonica       | '06/06 (H18/06) -' 09/04 (H21/04) | ACC         | ●          | ●           | ○            | ○         | ○           |                          |
| Sonica       | '06/06 (H18/06) -' 09/04 (H21/04) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Sonica       | '06/06 (H18/06) -' 09/04 (H21/04) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Sonica       | '06/06 (H18/06) -' 09/04 (H21/04) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Sonica       | '06/06 (H18/06) -' 09/04 (H21/04) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Sonica       | '06/06 (H18/06) -' 09/04 (H21/04) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '03/11 (H15/11) -' 05/06 (H17/06) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto        | '03/11 (H15/11) -' 05/06 (H17/06) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '03/11 (H15/11) -' 05/06 (H17/06) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto        | '03/11 (H15/11) -' 05/06 (H17/06) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '03/11 (H15/11) -' 05/06 (H17/06) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto        | '05/06 (H17/06) -' 07/12 (H19/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto        | '05/06 (H17/06) -' 07/12 (H19/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '05/06 (H17/06) -' 07/12 (H19/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto        | '05/06 (H17/06) -' 07/12 (H19/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '05/06 (H17/06) -' 07/12 (H19/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto        | '05/06 (H17/06) -' 07/12 (H19/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '07/12 (H19/12) -' 09/12 (H21/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto        | '07/12 (H19/12) -' 09/12 (H21/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto        | '07/12 (H19/12) -' 09/12 (H21/12) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '07/12 (H19/12) -' 09/12 (H21/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name | Year                             | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Tanto        | '07/12 (H19/12) -'09/12 (H21/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto        | '07/12 (H19/12) -'09/12 (H21/12) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '07/12 (H19/12) -'09/12 (H21/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '09/12 (H21/12) -'10/10 (H22/10) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto        | '09/12 (H21/12) -'10/10 (H22/10) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto        | '09/12 (H21/12) -'10/10 (H22/10) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '09/12 (H21/12) -'10/10 (H22/10) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '09/12 (H21/12) -'10/10 (H22/10) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto        | '09/12 (H21/12) -'10/10 (H22/10) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '09/12 (H21/12) -'10/10 (H22/10) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '10/10 (H22/10) -'11/06 (H23/06) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto        | '10/10 (H22/10) -'11/06 (H23/06) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto        | '10/10 (H22/10) -'11/06 (H23/06) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '10/10 (H22/10) -'11/06 (H23/06) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '10/10 (H22/10) -'11/06 (H23/06) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto        | '10/10 (H22/10) -'11/06 (H23/06) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '10/10 (H22/10) -'11/06 (H23/06) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '11/06 (H23/06) -'11/12 (H23/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto        | '11/06 (H23/06) -'11/12 (H23/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto        | '11/06 (H23/06) -'11/12 (H23/12) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '11/06 (H23/06) -'11/12 (H23/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '11/06 (H23/06) -'11/12 (H23/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto        | '11/06 (H23/06) -'11/12 (H23/12) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '11/06 (H23/06) -'11/12 (H23/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '11/12 (H23/12) -'12/05 (H24/05) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto        | '11/12 (H23/12) -'12/05 (H24/05) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto        | '11/12 (H23/12) -'12/05 (H24/05) | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto        | '11/12 (H23/12) -'12/05 (H24/05) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '11/12 (H23/12) -'12/05 (H24/05) | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '11/12 (H23/12) -'12/05 (H24/05) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '11/12 (H23/12) -'12/05 (H24/05) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto        | '11/12 (H23/12) -'12/05 (H24/05) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '11/12 (H23/12) -'12/05 (H24/05) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '12/05 (H24/05) -                | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto        | '12/05 (H24/05) -                | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto        | '12/05 (H24/05) -                | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '12/05 (H24/05) -                | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Tanto        | '12/05 (H24/05) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '12/05 (H24/05) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto        | '12/05 (H24/05) -                 | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto        | '12/05 (H24/05) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '09/12 (H21/12) -' 11/07 (H23/07) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto Exe    | '09/12 (H21/12) -' 11/07 (H23/07) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto Exe    | '09/12 (H21/12) -' 11/07 (H23/07) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '09/12 (H21/12) -' 11/07 (H23/07) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '09/12 (H21/12) -' 11/07 (H23/07) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto Exe    | '09/12 (H21/12) -' 11/07 (H23/07) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '09/12 (H21/12) -' 11/07 (H23/07) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '11/06 (H23/06) -' 11/12 (H23/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto Exe    | '11/06 (H23/06) -' 11/12 (H23/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto Exe    | '11/06 (H23/06) -' 11/12 (H23/12) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '11/06 (H23/06) -' 11/12 (H23/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '11/06 (H23/06) -' 11/12 (H23/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto Exe    | '11/06 (H23/06) -' 11/12 (H23/12) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '11/06 (H23/06) -' 11/12 (H23/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '11/12 (H23/12) -' 12/05 (H24/05) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto Exe    | '11/12 (H23/12) -' 12/05 (H24/05) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto Exe    | '11/12 (H23/12) -' 12/05 (H24/05) | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto Exe    | '11/12 (H23/12) -' 12/05 (H24/05) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '11/12 (H23/12) -' 12/05 (H24/05) | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '11/12 (H23/12) -' 12/05 (H24/05) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '11/12 (H23/12) -' 12/05 (H24/05) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto Exe    | '11/12 (H23/12) -' 12/05 (H24/05) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '11/12 (H23/12) -' 12/05 (H24/05) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '12/05 (H24/05) -                 | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Tanto Exe    | '12/05 (H24/05) -                 | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Tanto Exe    | '12/05 (H24/05) -                 | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '12/05 (H24/05) -                 | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '12/05 (H24/05) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '12/05 (H24/05) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Tanto Exe    | '12/05 (H24/05) -                 | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Tanto Exe    | '12/05 (H24/05) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Terios       | '00/05 (H12/05) -' 05/12 (H17/12) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Terios       | '00/05 (H12/05) -' 05/12 (H17/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name       | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Terios             | '00/05 (H12/05) - '05/12 (H17/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Terios             | '00/05 (H12/05) - '05/12 (H17/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Terios             | '00/05 (H12/05) - '05/12 (H17/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode               |
| Terios Kid         | '10/07 (H22/07) -                 | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Terios Kid         | '10/07 (H22/07) -                 | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Terios Kid         | '10/07 (H22/07) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Terios Kid         | '10/07 (H22/07) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode               |
| Terios Kid         | '10/07 (H22/07) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Terios Kid / Rukia | '00/11 (H12/11) - '01/11 (H13/11) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Terios Kid / Rukia | '00/11 (H12/11) - '01/11 (H13/11) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Terios Kid / Rukia | '00/11 (H12/11) - '01/11 (H13/11) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Terios Kid / Rukia | '00/11 (H12/11) - '01/11 (H13/11) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Terios Kid / Rukia | '01/11 (H13/11) - '10/07 (H22/07) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Terios Kid / Rukia | '01/11 (H13/11) - '10/07 (H22/07) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Terios Kid / Rukia | '01/11 (H13/11) - '10/07 (H22/07) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Terios Kid / Rukia | '01/11 (H13/11) - '10/07 (H22/07) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode               |
| Terios Kid / Rukia | '01/11 (H13/11) - '10/07 (H22/07) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '00/10 (H12/10) - '01/06 (H13/06) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Naked              | '00/10 (H12/10) - '01/06 (H13/06) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '00/10 (H12/10) - '01/06 (H13/06) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '00/10 (H12/10) - '01/06 (H13/06) | DVS         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '00/10 (H12/10) - '01/06 (H13/06) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '00/10 (H12/10) - '01/06 (H13/06) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '01/06 (H13/06) - '02/12 (H14/12) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Naked              | '01/06 (H13/06) - '02/12 (H14/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '01/06 (H13/06) - '02/12 (H14/12) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '01/06 (H13/06) - '02/12 (H14/12) | DVS         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '01/06 (H13/06) - '02/12 (H14/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '01/06 (H13/06) - '02/12 (H14/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '02/12 (H14/12) - '04/04 (H16/04) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Naked              | '02/12 (H14/12) - '04/04 (H16/04) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '02/12 (H14/12) - '04/04 (H16/04) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Naked              | '02/12 (H14/12) - '04/04 (H16/04) | DVS         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '02/12 (H14/12) - '04/04 (H16/04) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Naked              | '02/12 (H14/12) - '04/04 (H16/04) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai      | '01/01 (H13/01) - '01/05 (H13/05) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Hijet / Atrai      | '01/01 (H13/01) - '01/05 (H13/05) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name  | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|---------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Hijet / Atrai | '01/01 (H13/01) -' 01/05 (H13/05) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '01/01 (H13/01) -' 01/05 (H13/05) | EPS         | ●          | ●           | ○            | ●         | ○           |                          |
| Hijet / Atrai | '01/01 (H13/01) -' 01/05 (H13/05) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '01/05 (H13/05) -' 01/09 (H13/09) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Hijet / Atrai | '01/05 (H13/05) -' 01/09 (H13/09) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '01/05 (H13/05) -' 01/09 (H13/09) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '01/05 (H13/05) -' 01/09 (H13/09) | EPS         | ●          | ●           | ○            | ●         | ○           |                          |
| Hijet / Atrai | '01/05 (H13/05) -' 01/09 (H13/09) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '01/09 (H13/09) -' 01/10 (H13/10) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Hijet / Atrai | '01/09 (H13/09) -' 01/10 (H13/10) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '01/09 (H13/09) -' 01/10 (H13/10) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '01/09 (H13/09) -' 01/10 (H13/10) | EPS         | ●          | ●           | ○            | ●         | ○           |                          |
| Hijet / Atrai | '01/09 (H13/09) -' 01/10 (H13/10) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '01/10 (H13/10) -' 02/01 (H14/01) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Hijet / Atrai | '01/10 (H13/10) -' 02/01 (H14/01) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '01/10 (H13/10) -' 02/01 (H14/01) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '01/10 (H13/10) -' 02/01 (H14/01) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode               |
| Hijet / Atrai | '01/10 (H13/10) -' 02/01 (H14/01) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '02/01 (H14/01) -' 04/12 (H16/12) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Hijet / Atrai | '02/01 (H14/01) -' 04/12 (H16/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '02/01 (H14/01) -' 04/12 (H16/12) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '02/01 (H14/01) -' 04/12 (H16/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '02/01 (H14/01) -' 04/12 (H16/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode               |
| Hijet / Atrai | '02/01 (H14/01) -' 04/12 (H16/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '04/12 (H16/12) -' 10/08 (H22/08) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Hijet / Atrai | '04/12 (H16/12) -' 10/08 (H22/08) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '04/12 (H16/12) -' 10/08 (H22/08) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '04/12 (H16/12) -' 10/08 (H22/08) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Hijet / Atrai | '04/12 (H16/12) -' 10/08 (H22/08) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '04/12 (H16/12) -' 10/08 (H22/08) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode               |
| Hijet / Atrai | '04/12 (H16/12) -' 10/08 (H22/08) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Hijet / Atrai | '10/08 (H22/08) -' 11/11 (H23/11) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Hijet / Atrai | '10/08 (H22/08) -' 11/11 (H23/11) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '10/08 (H22/08) -' 11/11 (H23/11) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Hijet / Atrai | '10/08 (H22/08) -' 11/11 (H23/11) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '10/08 (H22/08) -' 11/11 (H23/11) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode               |
| Hijet / Atrai | '11/11 (H23/11) -'                | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |

| Vehicle Name  | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|---------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Hijet / Atrai | '11/11 (H23/11) -                 | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '11/11 (H23/11) -                 | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Hijet / Atrai | '11/11 (H23/11) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Hijet / Atrai | '11/11 (H23/11) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode               |
| Vigo          | '06/01 (H18/01) -' 10/07 (H22/07) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Vigo          | '06/01 (H18/01) -' 10/07 (H22/07) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Vigo          | '06/01 (H18/01) -' 10/07 (H22/07) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Vigo          | '06/01 (H18/01) -' 10/07 (H22/07) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Vigo          | '06/01 (H18/01) -' 10/07 (H22/07) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Vigo          | '06/01 (H18/01) -' 10/07 (H22/07) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Vigo          | '06/01 (H18/01) -' 10/07 (H22/07) | VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Vigo          | '10/07 (H22/07) -                 | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Vigo          | '10/07 (H22/07) -                 | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Vigo          | '10/07 (H22/07) -                 | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Vigo          | '10/07 (H22/07) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Vigo          | '10/07 (H22/07) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Vigo          | '10/07 (H22/07) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Vigo          | '10/07 (H22/07) -                 | VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Boone         | '04/05 (H16/05) -' 05/11 (H17/11) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Boone         | '04/05 (H16/05) -' 05/11 (H17/11) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone         | '04/05 (H16/05) -' 05/11 (H17/11) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Boone         | '04/05 (H16/05) -' 05/11 (H17/11) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone         | '04/05 (H16/05) -' 05/11 (H17/11) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Boone         | '04/05 (H16/05) -' 05/11 (H17/11) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone         | '05/11 (H17/11) -' 10/02 (H22/02) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Boone         | '05/11 (H17/11) -' 10/02 (H22/02) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone         | '05/11 (H17/11) -' 10/02 (H22/02) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Boone         | '05/11 (H17/11) -' 10/02 (H22/02) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone         | '05/11 (H17/11) -' 10/02 (H22/02) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Boone         | '05/11 (H17/11) -' 10/02 (H22/02) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone         | '10/02 (H22/02) -' 11/05 (H23/05) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Boone         | '10/02 (H22/02) -' 11/05 (H23/05) | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Boone         | '10/02 (H22/02) -' 11/05 (H23/05) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone         | '10/02 (H22/02) -' 11/05 (H23/05) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone         | '10/02 (H22/02) -' 11/05 (H23/05) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Boone         | '10/02 (H22/02) -' 11/05 (H23/05) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone         | '10/02 (H22/02) -' 11/05 (H23/05) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name   | Year                               | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|----------------|------------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Boone          | ' 10/02 (H22/02) -' 11/05 (H23/05) | Tachometer  | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 11/05 (H23/05) -' 12/06 (H24/06) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Boone          | ' 11/05 (H23/05) -' 12/06 (H24/06) | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Boone          | ' 11/05 (H23/05) -' 12/06 (H24/06) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 11/05 (H23/05) -' 12/06 (H24/06) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 11/05 (H23/05) -' 12/06 (H24/06) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Boone          | ' 11/05 (H23/05) -' 12/06 (H24/06) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 11/05 (H23/05) -' 12/06 (H24/06) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 11/05 (H23/05) -' 12/06 (H24/06) | Tachometer  | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 12/06 (H24/06) -                 | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Boone          | ' 12/06 (H24/06) -                 | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Boone          | ' 12/06 (H24/06) -                 | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 12/06 (H24/06) -                 | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 12/06 (H24/06) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 12/06 (H24/06) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Boone          | ' 12/06 (H24/06) -                 | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 12/06 (H24/06) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone          | ' 12/06 (H24/06) -                 | Tachometer  | ●          | ●           | ○            | ●         | ●           |                          |
| Boone Luminous | ' 08/12 (H20/12) -                 | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Boone Luminous | ' 08/12 (H20/12) -                 | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone Luminous | ' 08/12 (H20/12) -                 | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Boone Luminous | ' 08/12 (H20/12) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone Luminous | ' 08/12 (H20/12) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Boone Luminous | ' 08/12 (H20/12) -                 | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone Luminous | ' 08/12 (H20/12) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Boone Luminous | ' 08/12 (H20/12) -                 | VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Max            | ' 01/10 (H13/10) -                 | 4WD         | ●          | ●           | ○            | ●         | ○           |                          |
| Max            | ' 01/10 (H13/10) -                 | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Max            | ' 01/10 (H13/10) -                 | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Max            | ' 01/10 (H13/10) -                 | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Max            | ' 01/10 (H13/10) -                 | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Max            | ' 01/10 (H13/10) -                 | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Max            | ' 01/10 (H13/10) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Max            | ' 01/10 (H13/10) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira           | ' 00/10 (H12/10) -' 01/06 (H13/06) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Mira           | ' 00/10 (H12/10) -' 01/06 (H13/06) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira           | ' 00/10 (H12/10) -' 01/06 (H13/06) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Mira         | '00/10 (H12/10) -' 01/06 (H13/06) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Mira         | '00/10 (H12/10) -' 01/06 (H13/06) | DVS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '00/10 (H12/10) -' 01/06 (H13/06) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '00/10 (H12/10) -' 01/06 (H13/06) | EPS         | ●          | ●           | ○            | ○         | ○           | Check Mode; Signal Check |
| Mira         | '01/06 (H13/06) -' 02/12 (H14/12) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Mira         | '01/06 (H13/06) -' 02/12 (H14/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '01/06 (H13/06) -' 02/12 (H14/12) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '01/06 (H13/06) -' 02/12 (H14/12) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Mira         | '01/06 (H13/06) -' 02/12 (H14/12) | DVS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '01/06 (H13/06) -' 02/12 (H14/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '01/06 (H13/06) -' 02/12 (H14/12) | EPS         | ●          | ●           | ○            | ○         | ○           | Check Mode; Signal Check |
| Mira         | '02/12 (H14/12) -' 04/12 (H16/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira         | '02/12 (H14/12) -' 04/12 (H16/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '02/12 (H14/12) -' 04/12 (H16/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira         | '02/12 (H14/12) -' 04/12 (H16/12) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Mira         | '02/12 (H14/12) -' 04/12 (H16/12) | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira         | '02/12 (H14/12) -' 04/12 (H16/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '02/12 (H14/12) -' 04/12 (H16/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Mira         | '02/12 (H14/12) -' 04/12 (H16/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '04/12 (H16/12) -' 06/12 (H18/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira         | '04/12 (H16/12) -' 06/12 (H18/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '04/12 (H16/12) -' 06/12 (H18/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira         | '04/12 (H16/12) -' 06/12 (H18/12) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Mira         | '04/12 (H16/12) -' 06/12 (H18/12) | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira         | '04/12 (H16/12) -' 06/12 (H18/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '04/12 (H16/12) -' 06/12 (H18/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Mira         | '04/12 (H16/12) -' 06/12 (H18/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | ACC         | ●          | ●           | ○            | ○         | ○           |                          |
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | ERS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | Power       | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Mira         | '06/12 (H18/12) -' 08/12 (H20/12) | VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | ACC         | ●          | ●           | ○            | ○         | ○           |                          |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | ERS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | Power       | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '08/12 (H20/12) -' 10/04 (H22/04) | VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira         | '10/04 (H22/04) -' 11/07 (H23/07) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira         | '10/04 (H22/04) -' 11/07 (H23/07) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira         | '10/04 (H22/04) -' 11/07 (H23/07) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '10/04 (H22/04) -' 11/07 (H23/07) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '10/04 (H22/04) -' 11/07 (H23/07) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Mira         | '10/04 (H22/04) -' 11/07 (H23/07) | ERS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '10/04 (H22/04) -' 11/07 (H23/07) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '10/04 (H22/04) -' 11/07 (H23/07) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '11/07 (H23/07) -                 | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira         | '11/07 (H23/07) -                 | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira         | '11/07 (H23/07) -                 | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '11/07 (H23/07) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '11/07 (H23/07) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Mira         | '11/07 (H23/07) -                 | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira         | '11/07 (H23/07) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Ys      | '11/09 (H23/09) -                 | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira Ys      | '11/09 (H23/09) -                 | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira Ys      | '11/09 (H23/09) -                 | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Ys      | '11/09 (H23/09) -                 | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Ys      | '11/09 (H23/09) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Ys      | '11/09 (H23/09) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode               |
| Mira Ys      | '11/09 (H23/09) -                 | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Ys      | '11/09 (H23/09) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Ys      | '11/09 (H23/09) -                 | Tachometer  | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '09/08 (H21/08) -' 11/06 (H23/06) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |

| Vehicle Name | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Mira Cocoa   | '09/08 (H21/08) -' 11/06 (H23/06) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira Cocoa   | '09/08 (H21/08) -' 11/06 (H23/06) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '09/08 (H21/08) -' 11/06 (H23/06) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '09/08 (H21/08) -' 11/06 (H23/06) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Mira Cocoa   | '09/08 (H21/08) -' 11/06 (H23/06) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '09/08 (H21/08) -' 11/06 (H23/06) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '11/06 (H23/06) -' 12/04 (H24/04) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira Cocoa   | '11/06 (H23/06) -' 12/04 (H24/04) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira Cocoa   | '11/06 (H23/06) -' 12/04 (H24/04) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '11/06 (H23/06) -' 12/04 (H24/04) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '11/06 (H23/06) -' 12/04 (H24/04) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Mira Cocoa   | '11/06 (H23/06) -' 12/04 (H24/04) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '11/06 (H23/06) -' 12/04 (H24/04) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '12/04 (H24/04) -                 | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira Cocoa   | '12/04 (H24/04) -                 | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira Cocoa   | '12/04 (H24/04) -                 | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '12/04 (H24/04) -                 | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '12/04 (H24/04) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '12/04 (H24/04) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Mira Cocoa   | '12/04 (H24/04) -                 | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Cocoa   | '12/04 (H24/04) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Gino    | '02/08 (H14/08) -' 04/12 (H16/12) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Mira Gino    | '02/08 (H14/08) -' 04/12 (H16/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Gino    | '02/08 (H14/08) -' 04/12 (H16/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira Gino    | '02/08 (H14/08) -' 04/12 (H16/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira Gino    | '04/12 (H16/12) -' 08/12 (H20/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira Gino    | '04/12 (H16/12) -' 08/12 (H20/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Mira Gino    | '04/12 (H16/12) -' 08/12 (H20/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira (CNG)   | '08/12 (H20/12) -                 | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Mira (CNG)   | '08/12 (H20/12) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Mira (CNG)   | '08/12 (H20/12) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move         | '00/10 (H12/10) -' 01/06 (H13/06) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Move         | '00/10 (H12/10) -' 01/06 (H13/06) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '00/10 (H12/10) -' 01/06 (H13/06) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '00/10 (H12/10) -' 01/06 (H13/06) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '00/10 (H12/10) -' 01/06 (H13/06) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | '00/10 (H12/10) -' 01/06 (H13/06) | DVS         | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Move         | '00/10 (H12/10) -' 01/06 (H13/06) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '00/10 (H12/10) -' 01/06 (H13/06) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '01/06 (H13/06) -' 01/10 (H13/10) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Move         | '01/06 (H13/06) -' 01/10 (H13/10) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '01/06 (H13/06) -' 01/10 (H13/10) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '01/06 (H13/06) -' 01/10 (H13/10) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | '01/06 (H13/06) -' 01/10 (H13/10) | DVS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '01/06 (H13/06) -' 01/10 (H13/10) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '01/06 (H13/06) -' 01/10 (H13/10) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '01/10 (H13/10) -' 02/10 (H14/10) | A/B         | ●          | ●           | ○            | ○         | ○           |                          |
| Move         | '01/10 (H13/10) -' 02/10 (H14/10) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '01/10 (H13/10) -' 02/10 (H14/10) | ABS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '01/10 (H13/10) -' 02/10 (H14/10) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '01/10 (H13/10) -' 02/10 (H14/10) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | '01/10 (H13/10) -' 02/10 (H14/10) | DVS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '01/10 (H13/10) -' 02/10 (H14/10) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '01/10 (H13/10) -' 02/10 (H14/10) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '02/10 (H14/10) -' 04/12 (H16/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move         | '02/10 (H14/10) -' 04/12 (H16/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '02/10 (H14/10) -' 04/12 (H16/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '02/10 (H14/10) -' 04/12 (H16/12) | ACC         | ●          | ●           | ○            | ○         | ○           |                          |
| Move         | '02/10 (H14/10) -' 04/12 (H16/12) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | '02/10 (H14/10) -' 04/12 (H16/12) | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '02/10 (H14/10) -' 04/12 (H16/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '02/10 (H14/10) -' 04/12 (H16/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move         | '02/10 (H14/10) -' 04/12 (H16/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '04/12 (H16/12) -' 06/10 (H18/10) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move         | '04/12 (H16/12) -' 06/10 (H18/10) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '04/12 (H16/12) -' 06/10 (H18/10) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '04/12 (H16/12) -' 06/10 (H18/10) | ACC         | ●          | ●           | ○            | ○         | ○           |                          |
| Move         | '04/12 (H16/12) -' 06/10 (H18/10) | CVT         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | '04/12 (H16/12) -' 06/10 (H18/10) | DVS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '04/12 (H16/12) -' 06/10 (H18/10) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '04/12 (H16/12) -' 06/10 (H18/10) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move         | '04/12 (H16/12) -' 06/10 (H18/10) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |

| Vehicle Name | Year                              | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|-----------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | ACC         | ●          | ●           | ○            | ○         | ○           |                          |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | IMG         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | Power       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | PSB-D       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | PSB-P       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '06/10 (H18/10) -' 08/12 (H20/12) | VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | ACC         | ●          | ●           | ○            | ○         | ○           |                          |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | IMG         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | Power       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | PSB-D       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | PSB-P       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '08/12 (H20/12) -' 09/12 (H21/12) | VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '09/12 (H21/12) -' 10/12 (H22/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move         | '09/12 (H21/12) -' 10/12 (H22/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '09/12 (H21/12) -' 10/12 (H22/12) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '09/12 (H21/12) -' 10/12 (H22/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '09/12 (H21/12) -' 10/12 (H22/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move         | '09/12 (H21/12) -' 10/12 (H22/12) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '09/12 (H21/12) -' 10/12 (H22/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '09/12 (H21/12) -' 10/12 (H22/12) | Power       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '10/12 (H22/12) -' 11/08 (H23/08) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move         | '10/12 (H22/12) -' 11/08 (H23/08) | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '10/12 (H22/12) -' 11/08 (H23/08) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '10/12 (H22/12) -' 11/08 (H23/08) | DSS         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | '10/12 (H22/12) -' 11/08 (H23/08) | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name | Year                               | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|------------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Move         | ' 10/12 (H22/12) -' 11/08 (H23/08) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 10/12 (H22/12) -' 11/08 (H23/08) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move         | ' 10/12 (H22/12) -' 11/08 (H23/08) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 10/12 (H22/12) -' 11/08 (H23/08) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 10/12 (H22/12) -' 11/08 (H23/08) | PSB-D       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 10/12 (H22/12) -' 11/08 (H23/08) | PSB-P       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 10/12 (H22/12) -' 11/08 (H23/08) | Tachometer  | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | DSS         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | PSB-D       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | PSB-P       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/08 (H23/08) -' 11/11 (H23/11) | Tachometer  | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | DSS         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | PSB-D       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | PSB-P       | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 11/11 (H23/11) -' 12/05 (H24/05) | Tachometer  | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 12/05 (H24/05) -' 12/12 (H24/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move         | ' 12/05 (H24/05) -' 12/12 (H24/12) | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | ' 12/05 (H24/05) -' 12/12 (H24/12) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 12/05 (H24/05) -' 12/12 (H24/12) | DSS         | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | ' 12/05 (H24/05) -' 12/12 (H24/12) | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | ' 12/05 (H24/05) -' 12/12 (H24/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name | Year                             | System Name     | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|----------------------------------|-----------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Move         | '12/05 (H24/05) -'12/12 (H24/12) | EPS             | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move         | '12/05 (H24/05) -'12/12 (H24/12) | ITC             | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/05 (H24/05) -'12/12 (H24/12) | KFS             | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/05 (H24/05) -'12/12 (H24/12) | PSB-D           | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/05 (H24/05) -'12/12 (H24/12) | PSB-P           | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/05 (H24/05) -'12/12 (H24/12) | Tachometer      | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/12 (H24/12) -                | A/B             | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move         | '12/12 (H24/12) -                | ABS/VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move         | '12/12 (H24/12) -                | CVT             | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/12 (H24/12) -                | eco IDLE        | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/12 (H24/12) -                | EFI             | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/12 (H24/12) -                | EPS             | ●          | ●           | ○            | ●         | ○           | Check Mode               |
| Move         | '12/12 (H24/12) -                | HL AutoLeveling | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/12 (H24/12) -                | ITC             | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/12 (H24/12) -                | KFS             | ●          | ●           | ○            | ●         | ●           |                          |
| Move         | '12/12 (H24/12) -                | PCB             | ●          | ●           | ○            | ●         | ○           |                          |
| Move         | '12/12 (H24/12) -                | Tachometer      | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '08/08 (H20/08) -'09/12 (H21/12) | A/B             | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move Conte   | '08/08 (H20/08) -'09/12 (H21/12) | ABS             | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move Conte   | '08/08 (H20/08) -'09/12 (H21/12) | CVT             | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '08/08 (H20/08) -'09/12 (H21/12) | EFI             | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '08/08 (H20/08) -'09/12 (H21/12) | EPS             | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move Conte   | '08/08 (H20/08) -'09/12 (H21/12) | ITC             | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '08/08 (H20/08) -'09/12 (H21/12) | KFS             | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '09/12 (H21/12) -'11/06 (H23/06) | A/B             | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move Conte   | '09/12 (H21/12) -'11/06 (H23/06) | ABS             | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move Conte   | '09/12 (H21/12) -'11/06 (H23/06) | CVT             | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '09/12 (H21/12) -'11/06 (H23/06) | EFI             | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '09/12 (H21/12) -'11/06 (H23/06) | EPS             | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move Conte   | '09/12 (H21/12) -'11/06 (H23/06) | ITC             | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '09/12 (H21/12) -'11/06 (H23/06) | KFS             | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '11/06 (H23/06) -'12/04 (H24/04) | A/B             | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move Conte   | '11/06 (H23/06) -'12/04 (H24/04) | ABS             | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move Conte   | '11/06 (H23/06) -'12/04 (H24/04) | ABS/VSC         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move Conte   | '11/06 (H23/06) -'12/04 (H24/04) | CVT             | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '11/06 (H23/06) -'12/04 (H24/04) | eco IDLE        | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | '11/06 (H23/06) -'12/04 (H24/04) | EFI             | ●          | ●           | ○            | ●         | ●           |                          |

| Vehicle Name | Year                               | System Name | Read Codes | Erase Codes | Freeze Frame | Live Data | Active Test | Special Function         |
|--------------|------------------------------------|-------------|------------|-------------|--------------|-----------|-------------|--------------------------|
| Move Conte   | ' 11/06 (H23/06) -' 12/04 (H24/04) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move Conte   | ' 11/06 (H23/06) -' 12/04 (H24/04) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 11/06 (H23/06) -' 12/04 (H24/04) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 12/04 (H24/04) -' 12/05 (H24/05) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move Conte   | ' 12/04 (H24/04) -' 12/05 (H24/05) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move Conte   | ' 12/04 (H24/04) -' 12/05 (H24/05) | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move Conte   | ' 12/04 (H24/04) -' 12/05 (H24/05) | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 12/04 (H24/04) -' 12/05 (H24/05) | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 12/04 (H24/04) -' 12/05 (H24/05) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 12/04 (H24/04) -' 12/05 (H24/05) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move Conte   | ' 12/04 (H24/04) -' 12/05 (H24/05) | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 12/04 (H24/04) -' 12/05 (H24/05) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 12/05 (H24/05) -                 | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move Conte   | ' 12/05 (H24/05) -                 | ABS/VSC     | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move Conte   | ' 12/05 (H24/05) -                 | CVT         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 12/05 (H24/05) -                 | eco IDLE    | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 12/05 (H24/05) -                 | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 12/05 (H24/05) -                 | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move Conte   | ' 12/05 (H24/05) -                 | ITC         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Conte   | ' 12/05 (H24/05) -                 | KFS         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Latte   | ' 04/08 (H16/08) -' 08/12 (H20/12) | A/B         | ●          | ●           | ○            | ○         | ○           | Check Mode               |
| Move Latte   | ' 04/08 (H16/08) -' 08/12 (H20/12) | A/T         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Latte   | ' 04/08 (H16/08) -' 08/12 (H20/12) | ABS         | ●          | ●           | ○            | ●         | ●           | Check Mode; Signal Check |
| Move Latte   | ' 04/08 (H16/08) -' 08/12 (H20/12) | EFI         | ●          | ●           | ○            | ●         | ●           |                          |
| Move Latte   | ' 04/08 (H16/08) -' 08/12 (H20/12) | EPS         | ●          | ●           | ○            | ●         | ○           | Check Mode; Signal Check |
| Move Latte   | ' 04/08 (H16/08) -' 08/12 (H20/12) | KFS         | ●          | ●           | ○            | ●         | ●           |                          |