

MaxiDAS_Nissan_V7.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
4WAS (FRONT)	●	●	●	○	●	●	○
4WAS (MAIN)/RAS/HICAS	●	●	●	○	●	●	○
ABS	●	●	●	※	●	●	0002, 0008, 0010, 0012, 0014, 0016, 0018, 0020, 0022, 0024, 0026, 0028, 0030, 0032, 0034, 0036, 0038, 0040, 0042, 0044, 0046, 0048, 0050
ACCELE PEDAL ACT	●	●	●	○	●	●	○
ACTIVE ENG MOUNT	●	●	●	○	●	○	○
ACTIVE SUS	●	●	●	●	●	●	※
ADAPTIVE LIGHT	●	●	●	○	●	●	0009, 0011
AIR BAG	●	●	●	●	●	○	0003, 0005, 0006, 0013, 0015, 0017, 0019, 0021, 0023, 0025
AIR LEVELIZER	●	●	●	○	●	●	0027, 0029, 0031
AIR PRESSURE MONITOR	●	●	●	○	●	●	0033, 0035, 0037
ALL MODE AWD/4WD	●	●	●	○	●	●	0039, 0041, 0043, 0045, 0047, 0049, 0051
ASCD	○	●	●	○	●	○	○
AUTO BACK DOOR	●	●	●	○	●	○	○
AUTO DRIVE POS.	●	●	●	○	●	●	0052, 0054, 0056
AUTO SLIDE DOOR	●	●	●	○	●	※	○
AUTO SLIDE DOOR RIGHT	●	●	●	○	●	●	○
AVM	●	●	●	○	●	●	0053, 0055, 0057, 0059, 0061
BAC	●	●	●	○	●	○	○
BCM	※	●	●	○	●	●	0001, 0063, 0065, 0067, 0069, 0071, 0073, 0075, 0077, 0079, 0081, 0083, 0085, 0087, 0089, 0091, 0093, 0095, 0097, 0099, 0101, 0103, 0105, 0107, 0109, 0111, 0113, 0115, 0117, 0119, 0121, 0123, 0125, 0127, 0129, 0131, 0133, 0135, 0137, 0139, 0141, 0143, 0145, 0147, 0149, 0151, 0153, 0155, 0157, 0159, 0161, 0163, 0165, 0167, 0169, 0171, 0173, 0175, 0177, 0179, 0181, 0183, 0185, 0187, 0189, 0191, 0193, 0195, 0197, 0199, 0201, 0203, 0205, 0207, 0209, 0211, 0213, 0215, 0217, 0219, 0221, 0223, 0225, 0227, 0229
BRAKE	●	●	●	○	●	●	0293
BSW	●	●	●	○	●	●	○
CAN GATEWAY	●	●	●	○	●	○	○
CHA	●	●	●	○	●	●	0058, 0060, 0062
CHARGER	●	●	●	○	●	●	○

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CIU	●	●	●	○	●	○	0064
CONVERTIBLE ROOF	●	●	●	○	●	●	0070, 0072, 0074, 0076, 0078, 0080
Cluster	●	●	●	○	●	●	0066, 0068
DIFF LOCK	●	●	●	○	●	○	○
DISTANCE CONTROL	●	●	●	○	●	○	○
DIU	○	●	●	○	●	○	○
E-4WD	●	●	●	※	●	●	0001
E-SUS	●	●	●	○	●	●	0164, 0166, 0168
EHS/PKB	●	●	●	○	●	●	0293
EMCM	●	●	●	○	●	●	0293
ENGINE	●	●	●	※	●	●	0001, 0082, 0084, 0086, 0088, 0090, 0092, 0094, 0096, 0098, 0100, 0102, 0104, 0106, 0108, 0110, 0112, 0114, 0116, 0118, 0120, 0122, 0124, 0126, 0128, 0130, 0132, 0134, 0136, 0138, 0140, 0142, 0144, 0146, 0148, 0150, 0152,
EPS	●	●	●	○	●	○	0001, 0154, 0156, 0158, 0160, 0162
EV/HEV	●	●	●	●	●	●	0293
HEAD LAMP LEVELIZER	●	●	●	○	●	●	0170, 0172
HV BATTERY	●	●	●	●	●	●	0293
HVAC	●	●	●	○	●	●	0174, 0176, 0178, 0180, 0182, 0184, 0186, 0188, 0190, 0192, 0194, 0196
ICC/ADAS	●	●	●	※	●	●	0001, 0198, 0200, 0202, 0204, 0206
INTELLIGENT KEY	●	●	●	○	●	●	0001, 0208, 0210, 0212, 0214, 0216, 0218, 0220, 0222, 0224, 0226, 0228, 0230, 0232, 0234, 0236, 0238, 0240, 0242, 0244, 0246, 0248, 0250, 0252
IPDM E/R	○	●	●	○	●	●	0001
IVMS	●	●	●	○	●	○	○
LANE CAMERA	●	●	●	○	●	●	0231, 0233, 0235
LASER/RADAR	●	●	●	○	●	○	0293
METER/M&A	※	●	●	○	●	○	0001, 0237
MM CONN	●	●	●	○	●	○	0239
MOTOR ASSIST	○	●	●	○	●	○	0241
MOTOR CONTROL	●	●	●	※	●	○	0293
MULTI AV	※	●	●	○	●	○	0243
MULTI DISPLAY	○	●	●	○	●	●	○
NATS IMMU	○	●	●	○	○	○	○
OCCUPANT DETECTION	○	○	○	○	○	○	0293
POP UP HOOD	●	●	●	○	●	○	0006
PRECRASH SEATBELT	●	●	●	○	●	○	0245
PTC HEATER	●	●	●	○	●	○	○
RADIO	●	●	●	○	●	※	0247, 0249
REARVIEW CAMERA	●	○	○	○	●	○	0251, 0253

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
S/BLIND CAMERA	●	○	○	○	●	○	0255, 0257
SHIFT	●	●	●	○	●	○	0293
SIDE RADAR LEFT	●	●	●	○	●	●	0254
SIDE RADAR RIGHT	●	●	●	○	●	●	0256
SMART ENTRANCE	○	●	●	※	●	※	0001, 0259, 0261, 0263, 0265, 0267, 0269, 0271, 0273, 0275, 0277, 0279, 0281, 0283, 0285, 0287
SONAR	●	●	●	○	●	●	0258, 0260, 0262, 0264, 0266, 0268, 0270
SUB METER	○	●	●	○	○	○	○
SVT	●	●	●	○	●	○	0272
TCS	●	●	●	●	●	●	0293
TELEMATICS	●	●	●	○	●	○	0274, 0276, 0278
TOTAL ILLUM C/U	●	○	○	○	●	○	0280, 0282, 0284, 0286, 0288, 0290, 0291, 0292
TRANSMISSION	●	●	●	※	●	※	0001, 0289
VSP	●	●	●	○	●	○	○

Index	Special Function Name	Index
0001	CAN DIAG SUPPORT MNTR	0002
0003	ECU DISCRIMINATED NO	0004
0005	READ CODES [PAST]	0006
0007	CALIBRATION DATA	0008
0009	LEVELIZER ADJUSTMENT	0010
0011	ST ANG SEN ADJUSTMENT	0012
0013	LOCK COMPUTER	0014
0015	LOCK ECU	0016
0017	READING IMPACT CONTEXTS	0018
0019	UNLOCK COMPUTER	0020
0021	UNLOCK ECU	0022
0023	WRITE VIN	0024
0025	Write date of last after sales OPE	0026
0027	ADJUST HEIGHT INI	0028
0029	CLEAR HEIGHT INI	0030
0031	STANDARD HEIGHT LEVEL	0032
0033	ID REGIST	0034
0035	ID READ	0036
0037	SWITCH TPMS BETWEEN ON/OFF	0038
0039	ETS AIR BLEEDING	0040
0041	LOCK SLEEVE SENSOR INITIALIZE	0042
0043	LOCK SLEEVE SENSOR LEARNING	0044
0045	OIL DETERIORATION INFO RESET	0046
0047	START CALIBRATION	0048
0049	UNIT CHARACTERISTICS DATA	0050
0051	UNIT CHARACTERISTICS WRITE	0052
0053	INITIALIZE CAMERA IMAGE CALIBRATION	0054
0055	NON-VIEWABLE AREA REMINDER	0056
0057	PREDICTIVE COURSE LINE DISPLAY	0058
0059	SELECT LANGUAGE OF WARNING MESSAGE	0060
0061	STEERING ANGLE SENSOR ADJUSTMENT	0062
0063	ANS BACK I-KEY LOCK	0064
0065	ANS BACK I-KEY UNLOCK	0066
0067	ANSWER BACK FUNCTION	0068
0069	ANTI KEY LOCK IN FUNCTI	0070
0071	ANTI-LOCK OUT SET	0072
0073	AUT D-LK SET	0074
0075	AUTO LIGHT LOGIC SET	0076
0077	AUTO LOCK SET	0078
0079	AUTOMATIC DOOR LOCK SELECT	0080
0081	AUTOMATIC DOOR UNLOCK SELECT	0082
0083	AUTOMATIC LOCK/UNLOCK SELECT	0084
0085	BATTERY SAVER SET	0086
0087	COMPUTER CONFIGURATION	0088
0089	CONFIRM DONGLE ID	0090
0091	CONFIRM KEY FOB ID	0092
0093	CUSTOM A/LIGHT SETTING	0094
0095	D/LOCK VHCL SPD AJT	0096
0097	DEADLOCKING	0098
0099	DOOR LOCK-UNLOCK SET	0100
0101	DROP WIPE FUNC SET	0102

Index	Special Function Name	Index
0103	DTRL	0104
0105	ENGINE START BY I-KEY	0106
0107	ERASE COMPUTER MEMORY	0108
0109	FLASHING BUZZER	0110
0111	HAZARD ANSWER BACK	0112
0113	HAZARD LAMP SET	0114
0115	HEAD LIGHT TIMER	0116
0117	HEADLAMP WASHER AUTO SET	0118
0119	HORN CHIRP SET	0120
0121	HORN WITH KEYLESS LOCK	0122
0123	ID READ	0124
0125	ID REGIST	0126
0127	ILL DELAY SET	0128
0129	INSIDE ANT DIAGNOSIS	0130
0131	INSTRUMENT PANEL TYPE	0132
0133	INTELLIGENT KEY LINK SET	0134
0135	LO-BATT OF KEY FOB WARN	0136
0137	LOCK/UNLOCK BY I-KEY	0138
0139	MULTI ANSWER BACK SET	0140
0141	OVERSPEED FUNC-ARABIA	0142
0143	PANIC ALARM SET	0144
0145	PW DOWN SET	0146
0147	R LAMP TIMER LOGIC SET	0148
0149	RAIN SEN WIP FUNC SET	0150
0151	REMO CONT ID CONFIR	0152
0153	REMO CONT ID ERASUR	0154
0155	REMO CONT ID REGIST	0156
0157	RESET SETTING VALUE	0158
0159	RETAINED PWR SET	0160
0161	RETRACTABLE MIRROR SET	0162
0163	ROOM LAMP BAT SAV SET	0164
0165	ROOM LAMP OFF TIME SET	0166
0167	ROOM LAMP ON AT LOCK	0168
0169	ROOM LAMP ON TIME SET	0170
0171	ROOM LAMP TIMER SET	0172
0173	RR WIP RVRS SET	0174
0175	SECURITY ALARM SET	0176
0177	SECURITY ALARM SET (SIREN)	0178
0179	SECURITY DOOR LOCK SET	0180
0181	SET I/L D-UNLCK INTCON	0182
0183	SET R/DEF -ENG INTCON	0184
0185	SHORT CRANKING OUTPUT	0186
0187	SIREN SET	0188
0189	ST ANG SEN ADJUSTMENT	0190
0191	SWITCH MONITOR	0192
0193	SWITCH TPMS BETWEEN On/Off	0194
0195	THEFT ALM TRG	0196
0197	TRUNK OPEN DELAY	0198
0199	TRUNK OPEN SET	0200
0201	TRUNK/GLASS HATCH OPEN	0202
0203	TYPE E2	0204
0205	TYPE E4	0206
0207	TYPE N2	0208
0209	TYPE N2 (SPECIFIC TO RUSSIA)	0210

Index	Special Function Name	Index
0211	TYPE N2 (SPECIFIC TO VENEZUELA COLOMBIA)	0212
0213	TYPE N3	0214
0215	TYPE N4	0216
0217	TYPE N4 (SPECIFIC TO VENEZUELA COLOMBIA)	0218
0219	TYPE N5	0220
0221	UCH TYPE	0222
0223	WELCOME LIGHT SELECT	0224
0225	WELCOME LIGHT OP SET	0226
0227	WIPER SPEED SETTING	0228
0229	WRITE V. I. N.	0230
0231	AIM CHECK	0232
0233	AUTO AIM	0234
0235	CAUSE OF AUTO-CANCEL	0236
0237	W/L ON HISTORY	0238
0239	WRITE VIN	0240
0241	CALIBRATE ALL	0242
0243	WRITE VIN	0244
0245	DOOR OPENING RETRACT RETRY	0246
0247	WRITE DATE OF AFTER SALES OPERATION	0248
0249	WRITE VIN	0250
0251	SELCT GUIDELINE PATTERN	0252
0253	ADJ GUIDELINE POSITION	0254
0255	SELCT GUIDELINE PATTERN	0256
0257	ADJ GUIDELINE POSITION	0258
0259	AUDIBLE TRAILER WARNING	0260
0261	AUTO RE-LOCK	0262
0263	AUTO-RE ARM	0264
0265	KEY REMINDER	0266
0267	KEYLESS CHECK	0268
0269	KEYLESS DI FLASH	0270
0271	KEYLESS REGISTRATION	0272
0273	LASTEST ALARM TRIGGER	0274
0275	OLDEST ALARM TRIGGER	0276
0277	PRE-ARM FAST FLASH	0278
0279	PREVIOUS ALARM TRIGGER	0280
0281	SELECTIVE UNLOCK	0282
0283	SIREN FITTED	0284
0285	THEFT WARNING	0286
0287	TRUNK OPEN DELAY	0288
0289	WRITE VIN	0290
0291	PUDDLE LAMP FADE-IN/OUT	0292
0293	Work Support	

nction

Special Function Name
C/U INITIALIZATION
SELF FOUNCTION CHECK
TROUBLE DIAG RECORD
BLD HYD UNIT BRK CIRC
BLEEDING THE BRAKING SYSTEM
CAR COMPUTER DIAG.
CHECK TARGET TEETH
DECEL G SEN CALIBRATION
ESP AUTO RECONNECTION THRSH
ESP SENSOR PROGRAMMING
LONGITUDINAL ACCEL SEN
MEMORY ERASING
PRESS SEN CALIBRATION
SIDE G SEN CALIBRATION
SPEEDO INDEX
ST ANGLE SENSOR ADJUSTMENT
STEERING WHL ANGLE SEN
TACHOMETRIC INDEX
TEST MODE
TEST MODE END
TEST MODE EXTEN
VEH. SPEED AT INITIALISATION
VEHICLE PARAMETERS
WRITE VIN
Write date of last after sales OPE
EXIT SEAT SLIDE SETTING
EXIT TILT SETTING
SEAT SLIDE VOLUME SET
ERASE OVERHEAT COUNTER
ERS INCRRCT CRNKNG CNTR
WRITE VIN
WRITE VIN
WRITE VIN
FUEL GAUGE CALIBRATION
FLIPPER DOOR
ROOF LATCH
ROOF STATE LEARNING
ROOF STATE RESET
ROOF/TRUNK/PARCEL SHELF
TRUNK OPENER
A/F INITIAL LEARNING
A/F SEN 1 LEARN CLR
A/F SEN 2 LEARN CLR
A/F SEN LEAN CLR
AP POS LEARN CLR
CHECK FUEL LINES
CLSD THL POS LEARN
CML B/DCHRG CRNT CLEAR
CO ADJUSTMENT
CONFIG CLR
DECREMENT IDLE SPEED

Special Function Name
DF EXH PRES SEN LEARN CLR
DIF EX PRE LRN CLR
DPF DATA CLEAR
DPF DATA CLEAR
E/R AIR TEMP SEN LEARN CLR
EGR ADAPTIVES
EGR/V LEARN CLR
ENTER INJCTR CALIB DATA
ETHANOL M/R ADJ
EVAP SYSTEM CLOSE
EXH FUEL INJ DATA CLEAR
EXH PRSR SEN LEARN CLEAR
EXH V/T CONTROL LEARN
FUEL INJ QUANTITY LEARNING
FUEL PRESSURE RELEASE
G SENSOR CALIBRATION
IDLE AIR VOL LEARN
IGNITION TIMING ADJ
INCREMENT IDLE SPEED
INJ ADJ VAL CLR
INJ ADJ VAL REGIST
PTO REGISTRATION
READ VIN
VIN REGISTRATION
WRITE V. I. N.
COMPUTER CALIBRATION
SENSOR CALIBRATION
ST/ANGLE ADJUSTMENT
WRITE DATE OF AFTER SALES OPERATION
WRITE VIN
STANDARD HEIGHT LEVEL
ADJUST HEIGHT INI
CLEAR HEIGHT INI
SENSOR CUSTOMIZE
SENSOR INITIALISE
AIR FLOW REDUCTION SETTING
AIR INLET CHANGE SETTING
BLOW SET
CLEAN SW SET
Door Motor Starting Position Reset
FRE MEMORY SET
GAS SENSOR ADJUSTMENT
REAR TEMP SET CORRECT
REC MEMORY SET
STOP/START SYSTEM OPERATION COND SETTING
TARGET EVAPORATOR TEMP UPPER LIMIT SETTING
TEMP SET CORRECT
CAUSE OF AUTO-CANCEL
CAUSE OF AUTO-CANCEL 1
CAUSE OF AUTO-CANCEL 2
CAUSE OF AUTO-CANCEL 3
LASER BEAM ADJUST
ANSWER BACK FUNCTION
ANSWER BACK WITH I-KEY LOCK

Special Function Name
ANSWER BACK WITH I-KEY UNLOCK
ANTI KEY LOCK IN FUNCTION
AUTO RELOCK TIMER
CONFIRM KEY FOB ID
ENGINE START BY I-KEY
HAZARD ANSWER BACK
HORN WITH KEYLESS LOCK
I-KEY FUNCTION
KEYLESS FUNCTION
LOCK/UNLOCK BY I-KEY
LOW BATT OF KEY FOB WARN
LUG ROOM ENGINE START
P/W DOWN DELAY
PANIC ALARM DELAY
POWER SLIDE DOOR DELAY
REGIST KEY FOB ID
SELECTIVE UNLOCK FUNCTION
SHORT CRANKING OUTPUT
TAKE OUT FROM WINDOW WARN
TRUNK OPEN DELAY
TRUNK/GLASS HATCH OPEN
ACTIVATE OPERATION
ACTIVATE OPERATION
CENTER SEN DISTANCE SET
CORNER SEN DISTANCE SET
PARKING WIDTH LEVEL SETTING
TIRE DIAMETER ADJUSTMENT
TRAILER HITCH MODE
VOLUME SETTING
WRITE VIN
SVT SETTING
TCU ACTIVATE SETTING
SAVE VIN DATA
WRITE VIN DATA
AMBIENCE LAMP FADE-IN/OUT
E/G SW ILL HEART BEAT FUNCTION
E/G SW ILLUMI FADE-IN/OUT
FOOT LAMP FADE-IN/OUT
HSPL ILLUMINATION FADE-IN/OUT
MAP&PERSNL LAMP FADE-IN/OUT
MOOD LAMP FADE-IN/OUT