

MaxiDas_Proton_V1.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Vehicle Type	System Name	subSystem Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	SpecialFunction
Perdana	ENGINE(ECU)	MMC	○	●	●	●	●	
Perdana	ATM(TCU)	MMC	○	●	●	●	●	
Perdana	ABS	MMC	○	●	●	●	○	
Perdana	ABS	TEVES MK20	●	●	●	●	○	3
JUARA	ENGINE(ECU)	MMC	○	●	●	●	●	
JUARA	ATM(TCU)	MMC_ISO	○	●	●	●	○	
JUARA	EPS	MMC_EPS	○	●	●	●	○	
WIRA	ENGINE(ECU)	EMS400	●	●	●	●	●	5,6,8,9
WIRA	ENGINE(ECU)	MMC	○	●	●	●	●	
WIRA	ATM(TCU)	MMC_ISO	○	●	●	●	○	
WIRA	ATM(TCU)	MMC	○	●	●	●	●	
WIRA	ABS	MMC	○	●	●	●	●	
WIRA	IMMOBILISER	MMC	○	●	●	●	○	
WIRA	IMMOBILISER	SIEMENS	●	●	●	●	○	1,2
SATRIA	ENGINE(ECU)	EMS400	●	●	●	●	●	5,6,8,9
SATRIA	ENGINE(ECU)	MMC	○	●	●	●	●	
SATRIA	ATM(TCU)	MMC_ISO	○	●	●	●	○	
SATRIA	ATM(TCU)	MMC	○	●	●	●	●	
SATRIA	ABS	TEVES MK20	●	●	●	●	○	3
SATRIA	IMMOBILISER	MMC	○	●	●	●	●	
SATRIA	IMMOBILISER	SIEMENS	●	●	●	●	○	1,2
PUTRA	ENGINE(ECU)	MMC	○	●	●	●	●	
PUTRA	ATM(TCU)	MMC	○	●	●	●	●	
PUTRA	ABS	TEVES MK20	●	●	●	●	○	3
PUTRA	IMMOBILISER	MMC	○	●	●	●	○	
PUTRA	IMMOBILISER	SIEMENS	●	●	●	●	○	1,2
ARENA	ENGINE(ECU)	EMS400	●	●	●	●	●	5,6,8,9
ARENA	ATM(TCU)	MMC_ISO	○	●	●	●	○	
ARENA	ATM(TCU)	MMC	○	●	●	●	●	
ARENA	IMMOBILISER	SIEMENS	●	●	●	●	○	1,2

Vehicle Type	System Name	subSystem Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	SpecialFunction
WAJA	ENGINE (ECU)	EMS700	●	●	●	●	●	5,6,7,8,9,10,11,12
WAJA	ENGINE (ECU)	MMC	○	●	●	●	●	
WAJA	ENGINE (ECU)	RENAULT18	●	●	●	●	●	14
WAJA	ATM (TCU)	RENAULT18	●	●	●	●	●	29
WAJA	ATM (TCU)	MMC_ISO	○	●	●	●	○	
WAJA	ATM (TCU)	MMC	○	●	●	●	●	
WAJA	ABS	TRW	●	●	●	●	●	24
WAJA	SRS-AIRBAG	AC3	●	●	●	●	○	25,26,27,28
WAJA	SRS-AIRBAG	AC6	●	●	●	○	○	
WAJA	IMMOBILISER	MMC	○	●	●	●	○	
WAJA	IMMOBILISER	SIEMENS	●	●	●	●	○	1,2
GEN2	ENGINE (ECU)	EMS700	●	●	●	●	●	5,6,7,8,9,10,11,12
GEN2	ATM (TCU)	MMC_ISO	○	●	●	●	○	
GEN2	ABS	BOSCH	●	●	●	●	○	55
GEN2	ABS	TRW	●	●	●	●	●	24
GEN2	SRS-AIRBAG	AC3	●	●	●	●	○	25,26,27,28
GEN2	IMMOBILISER	SIEMENS	●	●	●	●	○	1,2
CHANCELLOR	ENGINE (ECU)	MMC	○	●	●	●	●	
CHANCELLOR	ATM (TCU)	MMC	○	●	●	●	●	
CHANCELLOR	ABS	TRW	●	●	●	●	●	24
SAVVY	ENGINE (ECU)	RENAULT12	●	●	●	●	●	52,53,54
SAVVY	ATM (TCU)	RENAULT12	●	●	●	●	●	13,30,31,32,33,34,35,36,37,38,39,40,41,56,57,58
SAVVY	SRS-AIRBAG	AC3	●	●	●	●	○	25,26,27,28
SATRIA NEO	ENGINE (ECU)	EMS700	●	●	●	●	●	5,6,7,8,9,10,11,12
SATRIA NEO	ATM (TCU)	MMC_ISO	○	●	●	●	○	
SATRIA NEO	ABS	BOSCH	●	●	●	●	○	55
SATRIA NEO	SRS-AIRBAG	AC3	●	●	●	●	○	25,26,27,28
SATRIA NEO	IMMOBILISER	SIEMENS	●	●	●	●	○	1,2
Persona	ENGINE (ECU)	EMS700	●	●	●	●	●	5,6,7,8,9,10,11,12
Persona	ENGINE (ECU)	EMS700 CPS	●	●	●	●	●	5,6,7,8,9,10,11,12
Persona	ATM (TCU)	MMC_ISO	○	●	●	●	○	
Persona	ABS	BOSCH	●	●	●	●	○	55
Persona	SRS-AIRBAG	AC3	●	●	●	●	○	25,26,27,28
Persona	IMMOBILISER	SIEMENS	●	●	●	●	○	1,2
SAGA	ENGINE (ECU)	EMS700	●	●	●	●	●	5,6,7,8,9,10,11,12
SAGA	ENGINE (ECU)	EMS700 CPS	●	●	●	●	●	5,6,7,8,9,10,11,12

Vehicle Type	System Name	subSystem Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Actuator	SpecialFunction
SAGA	ATM(TCU)	MMC_ISO	○	●	●	●	○	
SAGA	SRS-AIRBAG	AC3	●	●	●	●	○	25,26,27,28
SAGA	IMMOBILISER(2009~)	SIEMENS	●	●	●	●	○	1,2
EXORA	ENGINE(ECU)	EMS700	●	●	●	●	●	5,6,7,8,9,10,11,12
EXORA	ENGINE(ECU)	EMS700 CPS	●	●	●	●	●	5,6,7,8,9,10,11,12
EXORA	ATM(TCU)	MMC_ISO	○	●	●	●	○	
EXORA	ABS	TRW EBC450	●	●	●	●	○	
EXORA	BCM	BCF CONTINENTAL	●	●	●	●	●	43,44,45,46,47
EXORA	SRS	SMART II AUTOLIV	●	●	●	●	○	48
EXORA	IMMOBILISER	SIEMENS	●	●	●	●	○	1,2
Inspira	ENGINE(ECU)	1.8	●	●	●	●	●	49,50
Inspira	ENGINE(ECU)	2.0	●	●	●	●	●	49,50
Inspira	ATM(TCU)	ALL	●	●	●	●	○	51
Inspira	ABS	ALL	●	●	●	○	○	
Inspira	SRS	ALL	●	●	●	○	○	
Inspira	AC	ALL	●	●	●	○	○	
Inspira	ETACS	ALL	●	●	●	○	○	
Inspira	Meter	ALL	●	●	●	○	○	
Inspira	Immo	ALL	●	●	●	○	○	

Special_Function

Index	Special_Function	Index	Special_Function
1	SIEMENS IMMOBILIZER KEY CODING	2	SIEMENS IMMOBILIZER KEY CLEAR
3	Actuator Test	4	ECU RESET
5	FIRST INITIALISATION	6	ADJUST IDLE SPEED MANUAL OR AUTOMATIC P/N
7	ADJUST IDLE SPEED AUTO D	8	VARIANT CODING
9	THROTTLE BODY LEARNING	10	MISFIRE TEST
11	ADJUST IGNITION TIMING	12	FUNCTION CODING
13	CHANGE SETTING LAST CLUTCH REPLACEMENT	14	ALTER IDLE SPEED
15	READ OIL COUNT	16	READ OIL CHANGE DATE
17	READ AFTER SALES DATE	18	WRITE OIL CHANGE DATE
19	WRITE DAT AFTER SALES OPERAT	20	REINIT OIL COUNTER
21	REINIT AUTO ADAPTIVE	22	NOTE OIL COUNT
23	REINIT CONVERTOR LOCKUP ADAPIVE	24	EBC430 REPAIR CYCLE
25	LOCKING OF IGNITION	26	UNLOCKING OF IGNITION
27	READ DATE OF AFTER SALES	28	WRITE DATE OF AFTER SALES
29	CHANGE SETTING LAST SERVICE DATE	30	ERASE MENU PROGRAMMING RESET
31	ERASE MENU INITIALISATION CLUTCH CLOSED POSITION	32	GEAR SHIFTING GRID SELF TEST
33	HYDRAULIC PUMP DISABLE SELF TEST	34	HYDRAULIC PUMP ENABLE SELF TEST
35	BLEED CLUTCH PHASE 1 SELF TEST	36	BLEED CLUTCH PHASE 2 SELF TEST
37	BLEED HYDRAULIC UNIT SELF TEST	38	FORCE NEUTRAL SELF TEST
39	TEST ALL ACTUATORS SELF TEST	40	FORCE REVERSE SELF TEST
41	PURGE PRESSURE ACCUMULATION SELF TEST	42	Repair Bleeding
43	Self Test	44	ATWS LED
45	Alarm System	46	Clear Alarm Trigger History
47	Remote Keyless Entry Initialization	48	Operating Time
49	Learned value reset	50	VIN Writing
51	CVT Oil Degradation level	52	REINITIALISE PROGRAMMING
53	INJ CONTROL LOCKED	54	INJ CONTROL UNLOCKED
55	Repair Bleeding	56	CHANGE SETTING INITIALISATION CLUTCH CLOSED POSITION
57	ERASE MENU RESET CLUTCH KISS POINT	58	