

MaxiSys_Daihatsu_V1.20 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
YRV	'00/08 (H12/08) - '00/12 (H12/12)	A/B	●	●	○	○	○	
YRV	'00/08 (H12/08) - '00/12 (H12/12)	A/T	●	●	○	●	●	
YRV	'00/08 (H12/08) - '00/12 (H12/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
YRV	'00/08 (H12/08) - '00/12 (H12/12)	DVS	●	●	○	●	●	Check Mode; Signal Check
YRV	'00/08 (H12/08) - '00/12 (H12/12)	EFI	●	●	○	●	●	
YRV	'00/08 (H12/08) - '00/12 (H12/12)	KFS	●	●	○	○	○	
YRV	'00/12 (H12/12) -	A/B	●	●	○	○	○	
YRV	'00/12 (H12/12) -	A/T	●	●	○	●	●	
YRV	'00/12 (H12/12) -	ABS	●	●	○	●	●	Check Mode; Signal Check
YRV	'00/12 (H12/12) -	DVS	●	●	○	●	●	Check Mode; Signal Check
YRV	'00/12 (H12/12) -	EFI	●	●	○	●	●	
YRV	'00/12 (H12/12) -	KFS	●	●	○	●	●	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	A/B	●	●	○	○	○	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	ABS	●	●	○	●	●	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	EFI	●	●	○	●	●	
Atrai Wagon	'01/01 (H13/01) - '02/01 (H14/01)	KFS	●	●	○	●	●	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	A/B	●	●	○	○	○	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	A/T	●	●	○	●	●	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	ABS	●	●	○	●	●	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	EFI	●	●	○	●	●	
Atrai Wagon	'02/01 (H14/01) - '03/05 (H15/05)	KFS	●	●	○	●	●	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	A/B	●	●	○	○	○	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	A/T	●	●	○	●	●	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	EFI	●	●	○	●	●	
Atrai Wagon	'03/05 (H15/05) - '05/04 (H17/04)	KFS	●	●	○	●	●	
Atrai Wagon	'05/05 (H17/05) - '07/08 (H19/08)	A/B	●	●	○	○	○	Check Mode
Atrai Wagon	'05/05 (H17/05) - '07/08 (H19/08)	ABS	●	●	○	●	●	Check Mode; Signal Check
Atrai Wagon	'05/05 (H17/05) - '07/08 (H19/08)	EFI	●	●	○	●	●	
Atrai Wagon	'07/08 (H19/08) - '10/08 (H22/08)	A/B	●	●	○	○	○	Check Mode

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Atrai Wagon	'07/08 (H19/08) - '10/08 (H22/08)	ABS	●	●	○	●	●	Check Mode; Signal Check
Atrai Wagon	'07/08 (H19/08) - '10/08 (H22/08)	EFI	●	●	○	●	●	
Atrai 7 / Hijet Gran Cargo	'00/07 (H12/07) - '01/06 (H13/06)	A/B	●	●	○	○	○	
Atrai 7 / Hijet Gran Cargo	'00/07 (H12/07) - '01/06 (H13/06)	A/T	●	●	○	●	●	
Atrai 7 / Hijet Gran Cargo	'00/07 (H12/07) - '01/06 (H13/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Atrai 7 / Hijet Gran Cargo	'00/07 (H12/07) - '01/06 (H13/06)	EFI	●	●	○	●	●	
Atrai 7 / Hijet Gran Cargo	'00/07 (H12/07) - '01/06 (H13/06)	KFS	●	●	○	○	○	
Atrai 7 / Hijet Gran Cargo	'01/06 (H13/06) -	A/B	●	●	○	○	○	
Atrai 7 / Hijet Gran Cargo	'01/06 (H13/06) -	A/T	●	●	○	●	●	
Atrai 7 / Hijet Gran Cargo	'01/06 (H13/06) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Atrai 7 / Hijet Gran Cargo	'01/06 (H13/06) -	EFI	●	●	○	●	●	
Atrai 7 / Hijet Gran Cargo	'01/06 (H13/06) -	KFS	●	●	○	●	●	
Artis	'00/03 (H12/03) - '01/09 (H13/09)	A/B	●	●	○	○	○	
Artis	'00/03 (H12/03) - '01/09 (H13/09)	ABS	●	●	○	●	●	Check Mode; Signal Check
Artis	'00/03 (H12/03) - '01/09 (H13/09)	EFI&A/T	●	●	○	●	●	Check Mode; Signal Check
Artis	'01/09 (H13/09) - '06/01 (H18/01)	A/B	●	●	○	○	○	
Artis	'01/09 (H13/09) - '06/01 (H18/01)	ABS	●	●	○	●	●	Check Mode; Signal Check
Artis	'01/09 (H13/09) - '06/01 (H18/01)	EFI&A/T	●	●	○	●	●	Check Mode; Signal Check
Artis	'06/01 (H18/01) - '09/01 (H21/01)	EFI&A/T	●	●	○	●	●	Check Mode; Signal Check
Artis	'09/01 (H21/01) -	EFI&A/T	●	●	○	●	●	Check Mode; Signal Check
Esse	'05/12 (H17/12) - '10/04 (H22/04)	A/B	●	●	○	○	○	Check Mode
Esse	'05/12 (H17/12) - '10/04 (H22/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Esse	'05/12 (H17/12) - '10/04 (H22/04)	EFI	●	●	○	●	●	
Esse	'10/04 (H22/04) -	A/B	●	●	○	○	○	Check Mode
Esse	'10/04 (H22/04) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Esse	'10/04 (H22/04) -	EFI	●	●	○	●	●	
Optimistic	'00/10 (H12/10) - '01/06 (H13/06)	A/B	●	●	○	○	○	
Optimistic	'00/10 (H12/10) - '01/06 (H13/06)	A/T	●	●	○	●	●	
Optimistic	'00/10 (H12/10) - '01/06 (H13/06)	ABS	●	●	○	●	●	
Optimistic	'00/10 (H12/10) - '01/06 (H13/06)	CVT	●	●	○	●	○	
Optimistic	'00/10 (H12/10) - '01/06 (H13/06)	DVS	●	●	○	●	●	
Optimistic	'00/10 (H12/10) - '01/06 (H13/06)	EFI	●	●	○	●	●	
Optimistic	'01/06 (H13/06) - '02/08 (H14/08)	A/B	●	●	○	○	○	
Optimistic	'01/06 (H13/06) - '02/08 (H14/08)	A/T	●	●	○	●	●	
Optimistic	'01/06 (H13/06) - '02/08 (H14/08)	ABS	●	●	○	●	●	
Optimistic	'01/06 (H13/06) - '02/08 (H14/08)	CVT	●	●	○	●	○	
Optimistic	'01/06 (H13/06) - '02/08 (H14/08)	DVS	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Optimistic	'01/06 (H13/06) -'02/08 (H14/08)	EFI	●	●	○	●	●	
Coup	'06/05 (H18/05) -'10/07 (H22/07)	A/B	●	●	○	○	○	Check Mode
Coup	'06/05 (H18/05) -'10/07 (H22/07)	A/T	●	●	○	●	●	
Coup	'06/05 (H18/05) -'10/07 (H22/07)	ABS	●	●	○	●	●	Check Mode; Signal Check
Coup	'06/05 (H18/05) -'10/07 (H22/07)	EFI	●	●	○	●	●	
Coup	'06/05 (H18/05) -'10/07 (H22/07)	EPS	●	●	○	●	○	Check Mode; Signal Check
Coup	'06/05 (H18/05) -'10/07 (H22/07)	KFS	●	●	○	●	●	
Coup	'06/05 (H18/05) -'10/07 (H22/07)	VSC	●	●	○	●	●	Check Mode; Signal Check
Coup	'10/07 (H22/07) -	A/B	●	●	○	○	○	Check Mode
Coup	'10/07 (H22/07) -	A/T	●	●	○	●	●	
Coup	'10/07 (H22/07) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Coup	'10/07 (H22/07) -	EFI	●	●	○	●	●	
Coup	'10/07 (H22/07) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Coup	'10/07 (H22/07) -	KFS	●	●	○	●	●	
Coup	'10/07 (H22/07) -	VSC	●	●	○	●	●	Check Mode; Signal Check
Copen	'02/06 (H14/06) -'10/08 (H22/08)	A/B	●	●	○	○	○	
Copen	'02/06 (H14/06) -'10/08 (H22/08)	A/T	●	●	○	●	●	
Copen	'02/06 (H14/06) -'10/08 (H22/08)	ABS	●	●	○	●	●	Check Mode; Signal Check
Copen	'02/06 (H14/06) -'10/08 (H22/08)	EFI	●	●	○	●	●	
Copen	'02/06 (H14/06) -'10/08 (H22/08)	IMB	●	●	○	○	○	
Copen	'02/06 (H14/06) -'10/08 (H22/08)	Roof	●	●	○	●	●	
Copen	'10/08 (H22/08) -	A/B	●	●	○	○	○	
Copen	'10/08 (H22/08) -	A/T	●	●	○	●	●	
Copen	'10/08 (H22/08) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Copen	'10/08 (H22/08) -	EFI	●	●	○	●	●	
Copen	'10/08 (H22/08) -	IMB	●	●	○	○	○	
Copen	'10/08 (H22/08) -	Roof	●	●	○	●	●	
Storia	'00/05 (H12/05) -'00/12 (H12/12)	A/B	●	●	○	○	○	
Storia	'00/05 (H12/05) -'00/12 (H12/12)	A/T	●	●	○	●	●	
Storia	'00/05 (H12/05) -'00/12 (H12/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Storia	'00/05 (H12/05) -'00/12 (H12/12)	DVS	●	●	○	●	●	Check Mode; Signal Check
Storia	'00/05 (H12/05) -'00/12 (H12/12)	EFI	●	●	○	●	●	
Storia	'00/05 (H12/05) -'00/12 (H12/12)	KFS	●	●	○	○	○	
Storia	'00/12 (H12/12) -'02/01 (H14/01)	A/B	●	●	○	○	○	
Storia	'00/12 (H12/12) -'02/01 (H14/01)	A/T	●	●	○	●	●	
Storia	'00/12 (H12/12) -'02/01 (H14/01)	ABS	●	●	○	●	●	Check Mode; Signal Check
Storia	'00/12 (H12/12) -'02/01 (H14/01)	DVS	●	●	○	●	●	Check Mode; Signal Check

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Storia	'00/12 (H12/12) -' 02/01 (H14/01)	EFI	●	●	○	●	●	
Storia	'00/12 (H12/12) -' 02/01 (H14/01)	KFS	●	●	○	●	●	
Storia	'02/01 (H14/01) -' 02/08 (H14/08)	A/B	●	●	○	○	○	
Storia	'02/01 (H14/01) -' 02/08 (H14/08)	A/T	●	●	○	●	●	
Storia	'02/01 (H14/01) -' 02/08 (H14/08)	ABS	●	●	○	●	●	Check Mode; Signal Check
Storia	'02/01 (H14/01) -' 02/08 (H14/08)	DVS	●	●	○	●	●	Check Mode; Signal Check
Storia	'02/01 (H14/01) -' 02/08 (H14/08)	EFI	●	●	○	●	●	
Storia	'02/01 (H14/01) -' 02/08 (H14/08)	KFS	●	●	○	●	●	
Storia	'02/08 (H14/08) -	A/B	●	●	○	○	○	
Storia	'02/08 (H14/08) -	A/T	●	●	○	●	●	
Storia	'02/08 (H14/08) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Storia	'02/08 (H14/08) -	DVS	●	●	○	●	●	Check Mode; Signal Check
Storia	'02/08 (H14/08) -	EFI	●	●	○	●	●	
Storia	'02/08 (H14/08) -	KFS	●	●	○	●	●	
Sonica	'06/06 (H18/06) -' 09/04 (H21/04)	A/B	●	●	○	○	○	Check Mode
Sonica	'06/06 (H18/06) -' 09/04 (H21/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Sonica	'06/06 (H18/06) -' 09/04 (H21/04)	ACC	●	●	○	○	○	
Sonica	'06/06 (H18/06) -' 09/04 (H21/04)	CVT	●	●	○	●	●	
Sonica	'06/06 (H18/06) -' 09/04 (H21/04)	EFI	●	●	○	●	●	
Sonica	'06/06 (H18/06) -' 09/04 (H21/04)	EPS	●	●	○	●	○	Check Mode; Signal Check
Sonica	'06/06 (H18/06) -' 09/04 (H21/04)	ITC	●	●	○	●	●	
Sonica	'06/06 (H18/06) -' 09/04 (H21/04)	KFS	●	●	○	●	●	
Tanto	'03/11 (H15/11) -' 05/06 (H17/06)	A/B	●	●	○	○	○	Check Mode
Tanto	'03/11 (H15/11) -' 05/06 (H17/06)	A/T	●	●	○	●	●	
Tanto	'03/11 (H15/11) -' 05/06 (H17/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'03/11 (H15/11) -' 05/06 (H17/06)	EFI	●	●	○	●	●	
Tanto	'03/11 (H15/11) -' 05/06 (H17/06)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'05/06 (H17/06) -' 07/12 (H19/12)	A/B	●	●	○	○	○	Check Mode
Tanto	'05/06 (H17/06) -' 07/12 (H19/12)	A/T	●	●	○	●	●	
Tanto	'05/06 (H17/06) -' 07/12 (H19/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'05/06 (H17/06) -' 07/12 (H19/12)	EFI	●	●	○	●	●	
Tanto	'05/06 (H17/06) -' 07/12 (H19/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'05/06 (H17/06) -' 07/12 (H19/12)	KFS	●	●	○	●	●	
Tanto	'07/12 (H19/12) -' 09/12 (H21/12)	A/B	●	●	○	○	○	Check Mode
Tanto	'07/12 (H19/12) -' 09/12 (H21/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'07/12 (H19/12) -' 09/12 (H21/12)	CVT	●	●	○	●	●	
Tanto	'07/12 (H19/12) -' 09/12 (H21/12)	EFI	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Tanto	'07/12 (H19/12) -'09/12 (H21/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'07/12 (H19/12) -'09/12 (H21/12)	ITC	●	●	○	●	●	
Tanto	'07/12 (H19/12) -'09/12 (H21/12)	KFS	●	●	○	●	●	
Tanto	'09/12 (H21/12) -'10/10 (H22/10)	A/B	●	●	○	○	○	Check Mode
Tanto	'09/12 (H21/12) -'10/10 (H22/10)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'09/12 (H21/12) -'10/10 (H22/10)	CVT	●	●	○	●	●	
Tanto	'09/12 (H21/12) -'10/10 (H22/10)	EFI	●	●	○	●	●	
Tanto	'09/12 (H21/12) -'10/10 (H22/10)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'09/12 (H21/12) -'10/10 (H22/10)	ITC	●	●	○	●	●	
Tanto	'09/12 (H21/12) -'10/10 (H22/10)	KFS	●	●	○	●	●	
Tanto	'10/10 (H22/10) -'11/06 (H23/06)	A/B	●	●	○	○	○	Check Mode
Tanto	'10/10 (H22/10) -'11/06 (H23/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'10/10 (H22/10) -'11/06 (H23/06)	CVT	●	●	○	●	●	
Tanto	'10/10 (H22/10) -'11/06 (H23/06)	EFI	●	●	○	●	●	
Tanto	'10/10 (H22/10) -'11/06 (H23/06)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'10/10 (H22/10) -'11/06 (H23/06)	ITC	●	●	○	●	●	
Tanto	'10/10 (H22/10) -'11/06 (H23/06)	KFS	●	●	○	●	●	
Tanto	'11/06 (H23/06) -'11/12 (H23/12)	A/B	●	●	○	○	○	Check Mode
Tanto	'11/06 (H23/06) -'11/12 (H23/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'11/06 (H23/06) -'11/12 (H23/12)	CVT	●	●	○	●	●	
Tanto	'11/06 (H23/06) -'11/12 (H23/12)	EFI	●	●	○	●	●	
Tanto	'11/06 (H23/06) -'11/12 (H23/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'11/06 (H23/06) -'11/12 (H23/12)	ITC	●	●	○	●	●	
Tanto	'11/06 (H23/06) -'11/12 (H23/12)	KFS	●	●	○	●	●	
Tanto	'11/12 (H23/12) -'12/05 (H24/05)	A/B	●	●	○	○	○	Check Mode
Tanto	'11/12 (H23/12) -'12/05 (H24/05)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto	'11/12 (H23/12) -'12/05 (H24/05)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Tanto	'11/12 (H23/12) -'12/05 (H24/05)	CVT	●	●	○	●	●	
Tanto	'11/12 (H23/12) -'12/05 (H24/05)	eco IDLE	●	●	○	●	●	
Tanto	'11/12 (H23/12) -'12/05 (H24/05)	EFI	●	●	○	●	●	
Tanto	'11/12 (H23/12) -'12/05 (H24/05)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'11/12 (H23/12) -'12/05 (H24/05)	ITC	●	●	○	●	●	
Tanto	'11/12 (H23/12) -'12/05 (H24/05)	KFS	●	●	○	●	●	
Tanto	'12/05 (H24/05) -	A/B	●	●	○	○	○	Check Mode
Tanto	'12/05 (H24/05) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Tanto	'12/05 (H24/05) -	CVT	●	●	○	●	●	
Tanto	'12/05 (H24/05) -	eco IDLE	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Tanto	'12/05 (H24/05) -	EFI	●	●	○	●	●	
Tanto	'12/05 (H24/05) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto	'12/05 (H24/05) -	ITC	●	●	○	●	●	
Tanto	'12/05 (H24/05) -	KFS	●	●	○	●	●	
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	A/B	●	●	○	○	○	Check Mode
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	CVT	●	●	○	●	●	
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	EFI	●	●	○	●	●	
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	ITC	●	●	○	●	●	
Tanto Exe	'09/12 (H21/12) -' 11/07 (H23/07)	KFS	●	●	○	●	●	
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	A/B	●	●	○	○	○	Check Mode
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	CVT	●	●	○	●	●	
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	EFI	●	●	○	●	●	
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	ITC	●	●	○	●	●	
Tanto Exe	'11/06 (H23/06) -' 11/12 (H23/12)	KFS	●	●	○	●	●	
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	A/B	●	●	○	○	○	Check Mode
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	ABS	●	●	○	●	●	Check Mode; Signal Check
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	CVT	●	●	○	●	●	
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	eco IDLE	●	●	○	●	●	
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	EFI	●	●	○	●	●	
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	ITC	●	●	○	●	●	
Tanto Exe	'11/12 (H23/12) -' 12/05 (H24/05)	KFS	●	●	○	●	●	
Tanto Exe	'12/05 (H24/05) -	A/B	●	●	○	○	○	Check Mode
Tanto Exe	'12/05 (H24/05) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Tanto Exe	'12/05 (H24/05) -	CVT	●	●	○	●	●	
Tanto Exe	'12/05 (H24/05) -	eco IDLE	●	●	○	●	●	
Tanto Exe	'12/05 (H24/05) -	EFI	●	●	○	●	●	
Tanto Exe	'12/05 (H24/05) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Tanto Exe	'12/05 (H24/05) -	ITC	●	●	○	●	●	
Tanto Exe	'12/05 (H24/05) -	KFS	●	●	○	●	●	
Terios	'00/05 (H12/05) -' 05/12 (H17/12)	A/B	●	●	○	○	○	
Terios	'00/05 (H12/05) -' 05/12 (H17/12)	A/T	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Terios	'00/05 (H12/05) - '05/12 (H17/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Terios	'00/05 (H12/05) - '05/12 (H17/12)	EFI	●	●	○	●	●	
Terios	'00/05 (H12/05) - '05/12 (H17/12)	EPS	●	●	○	●	○	Check Mode
Terios Kid	'10/07 (H22/07) -	A/B	●	●	○	○	○	
Terios Kid	'10/07 (H22/07) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Terios Kid	'10/07 (H22/07) -	EFI	●	●	○	●	●	
Terios Kid	'10/07 (H22/07) -	EPS	●	●	○	●	○	Check Mode
Terios Kid	'10/07 (H22/07) -	KFS	●	●	○	●	●	
Terios Kid / Rukia	'00/11 (H12/11) - '01/11 (H13/11)	A/B	●	●	○	○	○	
Terios Kid / Rukia	'00/11 (H12/11) - '01/11 (H13/11)	ABS	●	●	○	●	●	Check Mode; Signal Check
Terios Kid / Rukia	'00/11 (H12/11) - '01/11 (H13/11)	EFI	●	●	○	●	●	
Terios Kid / Rukia	'00/11 (H12/11) - '01/11 (H13/11)	KFS	●	●	○	●	●	
Terios Kid / Rukia	'01/11 (H13/11) - '10/07 (H22/07)	A/B	●	●	○	○	○	
Terios Kid / Rukia	'01/11 (H13/11) - '10/07 (H22/07)	ABS	●	●	○	●	●	Check Mode; Signal Check
Terios Kid / Rukia	'01/11 (H13/11) - '10/07 (H22/07)	EFI	●	●	○	●	●	
Terios Kid / Rukia	'01/11 (H13/11) - '10/07 (H22/07)	EPS	●	●	○	●	○	Check Mode
Terios Kid / Rukia	'01/11 (H13/11) - '10/07 (H22/07)	KFS	●	●	○	●	●	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	A/B	●	●	○	○	○	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	A/T	●	●	○	●	●	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	ABS	●	●	○	●	●	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	DVS	●	●	○	●	●	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	EFI	●	●	○	●	●	
Naked	'00/10 (H12/10) - '01/06 (H13/06)	KFS	●	●	○	●	●	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	A/B	●	●	○	○	○	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	A/T	●	●	○	●	●	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	ABS	●	●	○	●	●	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	DVS	●	●	○	●	●	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	EFI	●	●	○	●	●	
Naked	'01/06 (H13/06) - '02/12 (H14/12)	KFS	●	●	○	●	●	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	A/B	●	●	○	○	○	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	A/T	●	●	○	●	●	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Naked	'02/12 (H14/12) - '04/04 (H16/04)	DVS	●	●	○	●	●	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	EFI	●	●	○	●	●	
Naked	'02/12 (H14/12) - '04/04 (H16/04)	KFS	●	●	○	●	●	
Hijet / Atrai	'01/01 (H13/01) - '01/05 (H13/05)	A/B	●	●	○	○	○	
Hijet / Atrai	'01/01 (H13/01) - '01/05 (H13/05)	ABS	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Hijet / Atrai	'01/01 (H13/01) -' 01/05 (H13/05)	EFI	●	●	○	●	●	
Hijet / Atrai	'01/01 (H13/01) -' 01/05 (H13/05)	EPS	●	●	○	●	○	
Hijet / Atrai	'01/01 (H13/01) -' 01/05 (H13/05)	KFS	●	●	○	●	●	
Hijet / Atrai	'01/05 (H13/05) -' 01/09 (H13/09)	A/B	●	●	○	○	○	
Hijet / Atrai	'01/05 (H13/05) -' 01/09 (H13/09)	ABS	●	●	○	●	●	
Hijet / Atrai	'01/05 (H13/05) -' 01/09 (H13/09)	EFI	●	●	○	●	●	
Hijet / Atrai	'01/05 (H13/05) -' 01/09 (H13/09)	EPS	●	●	○	●	○	
Hijet / Atrai	'01/05 (H13/05) -' 01/09 (H13/09)	KFS	●	●	○	●	●	
Hijet / Atrai	'01/09 (H13/09) -' 01/10 (H13/10)	A/B	●	●	○	○	○	
Hijet / Atrai	'01/09 (H13/09) -' 01/10 (H13/10)	ABS	●	●	○	●	●	
Hijet / Atrai	'01/09 (H13/09) -' 01/10 (H13/10)	EFI	●	●	○	●	●	
Hijet / Atrai	'01/09 (H13/09) -' 01/10 (H13/10)	EPS	●	●	○	●	○	
Hijet / Atrai	'01/09 (H13/09) -' 01/10 (H13/10)	KFS	●	●	○	●	●	
Hijet / Atrai	'01/10 (H13/10) -' 02/01 (H14/01)	A/B	●	●	○	○	○	
Hijet / Atrai	'01/10 (H13/10) -' 02/01 (H14/01)	ABS	●	●	○	●	●	
Hijet / Atrai	'01/10 (H13/10) -' 02/01 (H14/01)	EFI	●	●	○	●	●	
Hijet / Atrai	'01/10 (H13/10) -' 02/01 (H14/01)	EPS	●	●	○	●	○	Check Mode
Hijet / Atrai	'01/10 (H13/10) -' 02/01 (H14/01)	KFS	●	●	○	●	●	
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	A/B	●	●	○	○	○	
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	A/T	●	●	○	●	●	
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	ABS	●	●	○	●	●	
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	EFI	●	●	○	●	●	
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	EPS	●	●	○	●	○	Check Mode
Hijet / Atrai	'02/01 (H14/01) -' 04/12 (H16/12)	KFS	●	●	○	●	●	
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	A/B	●	●	○	○	○	Check Mode
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	A/T	●	●	○	●	●	
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	ABS	●	●	○	●	●	
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	ABS	●	●	○	●	●	Check Mode; Signal Check
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	EFI	●	●	○	●	●	
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	EPS	●	●	○	●	○	Check Mode
Hijet / Atrai	'04/12 (H16/12) -' 10/08 (H22/08)	EPS	●	●	○	●	○	Check Mode; Signal Check
Hijet / Atrai	'10/08 (H22/08) -' 11/11 (H23/11)	A/B	●	●	○	○	○	Check Mode
Hijet / Atrai	'10/08 (H22/08) -' 11/11 (H23/11)	ABS	●	●	○	●	●	
Hijet / Atrai	'10/08 (H22/08) -' 11/11 (H23/11)	ABS	●	●	○	●	●	Check Mode; Signal Check
Hijet / Atrai	'10/08 (H22/08) -' 11/11 (H23/11)	EFI	●	●	○	●	●	
Hijet / Atrai	'10/08 (H22/08) -' 11/11 (H23/11)	EPS	●	●	○	●	○	Check Mode
Hijet / Atrai	'11/11 (H23/11) -'	A/B	●	●	○	○	○	Check Mode

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Hijet / Atrai	'11/11 (H23/11) -	ABS	●	●	○	●	●	
Hijet / Atrai	'11/11 (H23/11) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Hijet / Atrai	'11/11 (H23/11) -	EFI	●	●	○	●	●	
Hijet / Atrai	'11/11 (H23/11) -	EPS	●	●	○	●	○	Check Mode
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	A/B	●	●	○	○	○	Check Mode
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	A/T	●	●	○	●	●	
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	ABS	●	●	○	●	●	Check Mode; Signal Check
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	EFI	●	●	○	●	●	
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	EPS	●	●	○	●	○	Check Mode; Signal Check
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	KFS	●	●	○	●	●	
Vigo	'06/01 (H18/01) -' 10/07 (H22/07)	VSC	●	●	○	●	●	Check Mode; Signal Check
Vigo	'10/07 (H22/07) -	A/B	●	●	○	○	○	Check Mode
Vigo	'10/07 (H22/07) -	A/T	●	●	○	●	●	
Vigo	'10/07 (H22/07) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Vigo	'10/07 (H22/07) -	EFI	●	●	○	●	●	
Vigo	'10/07 (H22/07) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Vigo	'10/07 (H22/07) -	KFS	●	●	○	●	●	
Vigo	'10/07 (H22/07) -	VSC	●	●	○	●	●	Check Mode; Signal Check
Boone	'04/05 (H16/05) -' 05/11 (H17/11)	A/B	●	●	○	○	○	Check Mode
Boone	'04/05 (H16/05) -' 05/11 (H17/11)	A/T	●	●	○	●	●	
Boone	'04/05 (H16/05) -' 05/11 (H17/11)	ABS	●	●	○	●	●	Check Mode; Signal Check
Boone	'04/05 (H16/05) -' 05/11 (H17/11)	EFI	●	●	○	●	●	
Boone	'04/05 (H16/05) -' 05/11 (H17/11)	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone	'04/05 (H16/05) -' 05/11 (H17/11)	KFS	●	●	○	●	●	
Boone	'05/11 (H17/11) -' 10/02 (H22/02)	A/B	●	●	○	○	○	Check Mode
Boone	'05/11 (H17/11) -' 10/02 (H22/02)	A/T	●	●	○	●	●	
Boone	'05/11 (H17/11) -' 10/02 (H22/02)	ABS	●	●	○	●	●	Check Mode; Signal Check
Boone	'05/11 (H17/11) -' 10/02 (H22/02)	EFI	●	●	○	●	●	
Boone	'05/11 (H17/11) -' 10/02 (H22/02)	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone	'05/11 (H17/11) -' 10/02 (H22/02)	KFS	●	●	○	●	●	
Boone	'10/02 (H22/02) -' 11/05 (H23/05)	A/B	●	●	○	○	○	Check Mode
Boone	'10/02 (H22/02) -' 11/05 (H23/05)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Boone	'10/02 (H22/02) -' 11/05 (H23/05)	CVT	●	●	○	●	●	
Boone	'10/02 (H22/02) -' 11/05 (H23/05)	EFI	●	●	○	●	●	
Boone	'10/02 (H22/02) -' 11/05 (H23/05)	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone	'10/02 (H22/02) -' 11/05 (H23/05)	ITC	●	●	○	●	●	
Boone	'10/02 (H22/02) -' 11/05 (H23/05)	KFS	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Boone	' 10/02 (H22/02) -' 11/05 (H23/05)	Tachometer	●	●	○	●	●	
Boone	' 11/05 (H23/05) -' 12/06 (H24/06)	A/B	●	●	○	○	○	Check Mode
Boone	' 11/05 (H23/05) -' 12/06 (H24/06)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Boone	' 11/05 (H23/05) -' 12/06 (H24/06)	CVT	●	●	○	●	●	
Boone	' 11/05 (H23/05) -' 12/06 (H24/06)	EFI	●	●	○	●	●	
Boone	' 11/05 (H23/05) -' 12/06 (H24/06)	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone	' 11/05 (H23/05) -' 12/06 (H24/06)	ITC	●	●	○	●	●	
Boone	' 11/05 (H23/05) -' 12/06 (H24/06)	KFS	●	●	○	●	●	
Boone	' 11/05 (H23/05) -' 12/06 (H24/06)	Tachometer	●	●	○	●	●	
Boone	' 12/06 (H24/06) -	A/B	●	●	○	○	○	Check Mode
Boone	' 12/06 (H24/06) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Boone	' 12/06 (H24/06) -	CVT	●	●	○	●	●	
Boone	' 12/06 (H24/06) -	eco IDLE	●	●	○	●	●	
Boone	' 12/06 (H24/06) -	EFI	●	●	○	●	●	
Boone	' 12/06 (H24/06) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone	' 12/06 (H24/06) -	ITC	●	●	○	●	●	
Boone	' 12/06 (H24/06) -	KFS	●	●	○	●	●	
Boone	' 12/06 (H24/06) -	Tachometer	●	●	○	●	●	
Boone Luminous	' 08/12 (H20/12) -	A/B	●	●	○	○	○	Check Mode
Boone Luminous	' 08/12 (H20/12) -	A/T	●	●	○	●	●	
Boone Luminous	' 08/12 (H20/12) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Boone Luminous	' 08/12 (H20/12) -	EFI	●	●	○	●	●	
Boone Luminous	' 08/12 (H20/12) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Boone Luminous	' 08/12 (H20/12) -	ITC	●	●	○	●	●	
Boone Luminous	' 08/12 (H20/12) -	KFS	●	●	○	●	●	
Boone Luminous	' 08/12 (H20/12) -	VSC	●	●	○	●	●	Check Mode; Signal Check
Max	' 01/10 (H13/10) -	4WD	●	●	○	●	○	
Max	' 01/10 (H13/10) -	A/B	●	●	○	○	○	
Max	' 01/10 (H13/10) -	A/T	●	●	○	●	●	
Max	' 01/10 (H13/10) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Max	' 01/10 (H13/10) -	CVT	●	●	○	●	○	
Max	' 01/10 (H13/10) -	DVS	●	●	○	●	●	Check Mode; Signal Check
Max	' 01/10 (H13/10) -	EFI	●	●	○	●	●	
Max	' 01/10 (H13/10) -	KFS	●	●	○	●	●	
Mira	' 00/10 (H12/10) -' 01/06 (H13/06)	A/B	●	●	○	○	○	
Mira	' 00/10 (H12/10) -' 01/06 (H13/06)	A/T	●	●	○	●	●	
Mira	' 00/10 (H12/10) -' 01/06 (H13/06)	ABS	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Mira	'00/10 (H12/10) -' 01/06 (H13/06)	CVT	●	●	○	●	○	
Mira	'00/10 (H12/10) -' 01/06 (H13/06)	DVS	●	●	○	●	●	
Mira	'00/10 (H12/10) -' 01/06 (H13/06)	EFI	●	●	○	●	●	
Mira	'00/10 (H12/10) -' 01/06 (H13/06)	EPS	●	●	○	○	○	Check Mode; Signal Check
Mira	'01/06 (H13/06) -' 02/12 (H14/12)	A/B	●	●	○	○	○	
Mira	'01/06 (H13/06) -' 02/12 (H14/12)	A/T	●	●	○	●	●	
Mira	'01/06 (H13/06) -' 02/12 (H14/12)	ABS	●	●	○	●	●	
Mira	'01/06 (H13/06) -' 02/12 (H14/12)	CVT	●	●	○	●	○	
Mira	'01/06 (H13/06) -' 02/12 (H14/12)	DVS	●	●	○	●	●	
Mira	'01/06 (H13/06) -' 02/12 (H14/12)	EFI	●	●	○	●	●	
Mira	'01/06 (H13/06) -' 02/12 (H14/12)	EPS	●	●	○	○	○	Check Mode; Signal Check
Mira	'02/12 (H14/12) -' 04/12 (H16/12)	A/B	●	●	○	○	○	Check Mode
Mira	'02/12 (H14/12) -' 04/12 (H16/12)	A/T	●	●	○	●	●	
Mira	'02/12 (H14/12) -' 04/12 (H16/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'02/12 (H14/12) -' 04/12 (H16/12)	CVT	●	●	○	●	○	
Mira	'02/12 (H14/12) -' 04/12 (H16/12)	DVS	●	●	○	●	●	Check Mode; Signal Check
Mira	'02/12 (H14/12) -' 04/12 (H16/12)	EFI	●	●	○	●	●	
Mira	'02/12 (H14/12) -' 04/12 (H16/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'02/12 (H14/12) -' 04/12 (H16/12)	KFS	●	●	○	●	●	
Mira	'04/12 (H16/12) -' 06/12 (H18/12)	A/B	●	●	○	○	○	Check Mode
Mira	'04/12 (H16/12) -' 06/12 (H18/12)	A/T	●	●	○	●	●	
Mira	'04/12 (H16/12) -' 06/12 (H18/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'04/12 (H16/12) -' 06/12 (H18/12)	CVT	●	●	○	●	○	
Mira	'04/12 (H16/12) -' 06/12 (H18/12)	DVS	●	●	○	●	●	Check Mode; Signal Check
Mira	'04/12 (H16/12) -' 06/12 (H18/12)	EFI	●	●	○	●	●	
Mira	'04/12 (H16/12) -' 06/12 (H18/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'04/12 (H16/12) -' 06/12 (H18/12)	KFS	●	●	○	●	●	
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	A/B	●	●	○	○	○	Check Mode
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	ACC	●	●	○	○	○	
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	CVT	●	●	○	●	●	
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	EFI	●	●	○	●	●	
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	ERS	●	●	○	●	●	
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	ITC	●	●	○	●	●	
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	KFS	●	●	○	●	●	
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	Power	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Mira	'06/12 (H18/12) -' 08/12 (H20/12)	VSC	●	●	○	●	●	Check Mode; Signal Check
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	A/B	●	●	○	○	○	Check Mode
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	ACC	●	●	○	○	○	
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	CVT	●	●	○	●	●	
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	EFI	●	●	○	●	●	
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	ERS	●	●	○	●	●	
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	ITC	●	●	○	●	●	
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	KFS	●	●	○	●	●	
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	Power	●	●	○	●	●	
Mira	'08/12 (H20/12) -' 10/04 (H22/04)	VSC	●	●	○	●	●	Check Mode; Signal Check
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	A/B	●	●	○	○	○	Check Mode
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	CVT	●	●	○	●	●	
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	EFI	●	●	○	●	●	
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	ERS	●	●	○	●	●	
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	ITC	●	●	○	●	●	
Mira	'10/04 (H22/04) -' 11/07 (H23/07)	KFS	●	●	○	●	●	
Mira	'11/07 (H23/07) -	A/B	●	●	○	○	○	Check Mode
Mira	'11/07 (H23/07) -	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira	'11/07 (H23/07) -	CVT	●	●	○	●	●	
Mira	'11/07 (H23/07) -	EFI	●	●	○	●	●	
Mira	'11/07 (H23/07) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira	'11/07 (H23/07) -	ITC	●	●	○	●	●	
Mira	'11/07 (H23/07) -	KFS	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	A/B	●	●	○	○	○	Check Mode
Mira Ys	'11/09 (H23/09) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Mira Ys	'11/09 (H23/09) -	CVT	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	eco IDLE	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	EFI	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	EPS	●	●	○	●	○	Check Mode
Mira Ys	'11/09 (H23/09) -	ITC	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	KFS	●	●	○	●	●	
Mira Ys	'11/09 (H23/09) -	Tachometer	●	●	○	●	●	
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	A/B	●	●	○	○	○	Check Mode

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	CVT	●	●	○	●	●	
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	EFI	●	●	○	●	●	
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	ITC	●	●	○	●	●	
Mira Cocoa	'09/08 (H21/08) -' 11/06 (H23/06)	KFS	●	●	○	●	●	
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	A/B	●	●	○	○	○	Check Mode
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	CVT	●	●	○	●	●	
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	EFI	●	●	○	●	●	
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	ITC	●	●	○	●	●	
Mira Cocoa	'11/06 (H23/06) -' 12/04 (H24/04)	KFS	●	●	○	●	●	
Mira Cocoa	'12/04 (H24/04) -	A/B	●	●	○	○	○	Check Mode
Mira Cocoa	'12/04 (H24/04) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Mira Cocoa	'12/04 (H24/04) -	CVT	●	●	○	●	●	
Mira Cocoa	'12/04 (H24/04) -	eco IDLE	●	●	○	●	●	
Mira Cocoa	'12/04 (H24/04) -	EFI	●	●	○	●	●	
Mira Cocoa	'12/04 (H24/04) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Mira Cocoa	'12/04 (H24/04) -	ITC	●	●	○	●	●	
Mira Cocoa	'12/04 (H24/04) -	KFS	●	●	○	●	●	
Mira Gino	'02/08 (H14/08) -' 04/12 (H16/12)	A/B	●	●	○	○	○	
Mira Gino	'02/08 (H14/08) -' 04/12 (H16/12)	A/T	●	●	○	●	●	
Mira Gino	'02/08 (H14/08) -' 04/12 (H16/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira Gino	'02/08 (H14/08) -' 04/12 (H16/12)	EFI	●	●	○	●	●	
Mira Gino	'04/12 (H16/12) -' 08/12 (H20/12)	A/B	●	●	○	○	○	Check Mode
Mira Gino	'04/12 (H16/12) -' 08/12 (H20/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Mira Gino	'04/12 (H16/12) -' 08/12 (H20/12)	EFI	●	●	○	●	●	
Mira (CNG)	'08/12 (H20/12) -	A/B	●	●	○	○	○	Check Mode
Mira (CNG)	'08/12 (H20/12) -	EFI	●	●	○	●	●	
Mira (CNG)	'08/12 (H20/12) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	'00/10 (H12/10) -' 01/06 (H13/06)	A/B	●	●	○	○	○	
Move	'00/10 (H12/10) -' 01/06 (H13/06)	A/T	●	●	○	●	●	
Move	'00/10 (H12/10) -' 01/06 (H13/06)	ABS	●	●	○	●	●	
Move	'00/10 (H12/10) -' 01/06 (H13/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	'00/10 (H12/10) -' 01/06 (H13/06)	CVT	●	●	○	●	○	
Move	'00/10 (H12/10) -' 01/06 (H13/06)	DVS	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Move	'00/10 (H12/10) -' 01/06 (H13/06)	EFI	●	●	○	●	●	
Move	'00/10 (H12/10) -' 01/06 (H13/06)	KFS	●	●	○	●	●	
Move	'01/06 (H13/06) -' 01/10 (H13/10)	A/B	●	●	○	○	○	
Move	'01/06 (H13/06) -' 01/10 (H13/10)	A/T	●	●	○	●	●	
Move	'01/06 (H13/06) -' 01/10 (H13/10)	ABS	●	●	○	●	●	
Move	'01/06 (H13/06) -' 01/10 (H13/10)	CVT	●	●	○	●	○	
Move	'01/06 (H13/06) -' 01/10 (H13/10)	DVS	●	●	○	●	●	
Move	'01/06 (H13/06) -' 01/10 (H13/10)	EFI	●	●	○	●	●	
Move	'01/06 (H13/06) -' 01/10 (H13/10)	KFS	●	●	○	●	●	
Move	'01/10 (H13/10) -' 02/10 (H14/10)	A/B	●	●	○	○	○	
Move	'01/10 (H13/10) -' 02/10 (H14/10)	A/T	●	●	○	●	●	
Move	'01/10 (H13/10) -' 02/10 (H14/10)	ABS	●	●	○	●	●	
Move	'01/10 (H13/10) -' 02/10 (H14/10)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	'01/10 (H13/10) -' 02/10 (H14/10)	CVT	●	●	○	●	○	
Move	'01/10 (H13/10) -' 02/10 (H14/10)	DVS	●	●	○	●	●	
Move	'01/10 (H13/10) -' 02/10 (H14/10)	EFI	●	●	○	●	●	
Move	'01/10 (H13/10) -' 02/10 (H14/10)	KFS	●	●	○	●	●	
Move	'02/10 (H14/10) -' 04/12 (H16/12)	A/B	●	●	○	○	○	Check Mode
Move	'02/10 (H14/10) -' 04/12 (H16/12)	A/T	●	●	○	●	●	
Move	'02/10 (H14/10) -' 04/12 (H16/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	'02/10 (H14/10) -' 04/12 (H16/12)	ACC	●	●	○	○	○	
Move	'02/10 (H14/10) -' 04/12 (H16/12)	CVT	●	●	○	●	○	
Move	'02/10 (H14/10) -' 04/12 (H16/12)	DVS	●	●	○	●	●	Check Mode; Signal Check
Move	'02/10 (H14/10) -' 04/12 (H16/12)	EFI	●	●	○	●	●	
Move	'02/10 (H14/10) -' 04/12 (H16/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	'02/10 (H14/10) -' 04/12 (H16/12)	KFS	●	●	○	●	●	
Move	'04/12 (H16/12) -' 06/10 (H18/10)	A/B	●	●	○	○	○	Check Mode
Move	'04/12 (H16/12) -' 06/10 (H18/10)	A/T	●	●	○	●	●	
Move	'04/12 (H16/12) -' 06/10 (H18/10)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	'04/12 (H16/12) -' 06/10 (H18/10)	ACC	●	●	○	○	○	
Move	'04/12 (H16/12) -' 06/10 (H18/10)	CVT	●	●	○	●	○	
Move	'04/12 (H16/12) -' 06/10 (H18/10)	DVS	●	●	○	●	●	Check Mode; Signal Check
Move	'04/12 (H16/12) -' 06/10 (H18/10)	EFI	●	●	○	●	●	
Move	'04/12 (H16/12) -' 06/10 (H18/10)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	'04/12 (H16/12) -' 06/10 (H18/10)	KFS	●	●	○	●	●	
Move	'06/10 (H18/10) -' 08/12 (H20/12)	A/B	●	●	○	○	○	Check Mode
Move	'06/10 (H18/10) -' 08/12 (H20/12)	ABS	●	●	○	●	●	Check Mode; Signal Check

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Move	'06/10 (H18/10) -'08/12 (H20/12)	ACC	●	●	○	○	○	
Move	'06/10 (H18/10) -'08/12 (H20/12)	CVT	●	●	○	●	●	
Move	'06/10 (H18/10) -'08/12 (H20/12)	EFI	●	●	○	●	●	
Move	'06/10 (H18/10) -'08/12 (H20/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	'06/10 (H18/10) -'08/12 (H20/12)	IMG	●	●	○	●	○	
Move	'06/10 (H18/10) -'08/12 (H20/12)	ITC	●	●	○	●	●	
Move	'06/10 (H18/10) -'08/12 (H20/12)	KFS	●	●	○	●	●	
Move	'06/10 (H18/10) -'08/12 (H20/12)	Power	●	●	○	●	●	
Move	'06/10 (H18/10) -'08/12 (H20/12)	PSB-D	●	●	○	●	●	
Move	'06/10 (H18/10) -'08/12 (H20/12)	PSB-P	●	●	○	●	●	
Move	'06/10 (H18/10) -'08/12 (H20/12)	VSC	●	●	○	●	●	Check Mode; Signal Check
Move	'08/12 (H20/12) -'09/12 (H21/12)	A/B	●	●	○	○	○	Check Mode
Move	'08/12 (H20/12) -'09/12 (H21/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	'08/12 (H20/12) -'09/12 (H21/12)	ACC	●	●	○	○	○	
Move	'08/12 (H20/12) -'09/12 (H21/12)	CVT	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	EFI	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	'08/12 (H20/12) -'09/12 (H21/12)	IMG	●	●	○	●	○	
Move	'08/12 (H20/12) -'09/12 (H21/12)	ITC	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	KFS	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	Power	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	PSB-D	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	PSB-P	●	●	○	●	●	
Move	'08/12 (H20/12) -'09/12 (H21/12)	VSC	●	●	○	●	●	Check Mode; Signal Check
Move	'09/12 (H21/12) -'10/12 (H22/12)	A/B	●	●	○	○	○	Check Mode
Move	'09/12 (H21/12) -'10/12 (H22/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move	'09/12 (H21/12) -'10/12 (H22/12)	CVT	●	●	○	●	●	
Move	'09/12 (H21/12) -'10/12 (H22/12)	EFI	●	●	○	●	●	
Move	'09/12 (H21/12) -'10/12 (H22/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	'09/12 (H21/12) -'10/12 (H22/12)	ITC	●	●	○	●	●	
Move	'09/12 (H21/12) -'10/12 (H22/12)	KFS	●	●	○	●	●	
Move	'09/12 (H21/12) -'10/12 (H22/12)	Power	●	●	○	●	●	
Move	'10/12 (H22/12) -'11/08 (H23/08)	A/B	●	●	○	○	○	Check Mode
Move	'10/12 (H22/12) -'11/08 (H23/08)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move	'10/12 (H22/12) -'11/08 (H23/08)	CVT	●	●	○	●	●	
Move	'10/12 (H22/12) -'11/08 (H23/08)	DSS	●	●	○	●	○	
Move	'10/12 (H22/12) -'11/08 (H23/08)	eco IDLE	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Move	' 10/12 (H22/12) -' 11/08 (H23/08)	EFI	●	●	○	●	●	
Move	' 10/12 (H22/12) -' 11/08 (H23/08)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	' 10/12 (H22/12) -' 11/08 (H23/08)	ITC	●	●	○	●	●	
Move	' 10/12 (H22/12) -' 11/08 (H23/08)	KFS	●	●	○	●	●	
Move	' 10/12 (H22/12) -' 11/08 (H23/08)	PSB-D	●	●	○	●	●	
Move	' 10/12 (H22/12) -' 11/08 (H23/08)	PSB-P	●	●	○	●	●	
Move	' 10/12 (H22/12) -' 11/08 (H23/08)	Tachometer	●	●	○	●	●	
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	A/B	●	●	○	○	○	Check Mode
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	CVT	●	●	○	●	●	
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	DSS	●	●	○	●	○	
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	eco IDLE	●	●	○	●	●	
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	EFI	●	●	○	●	●	
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	ITC	●	●	○	●	●	
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	KFS	●	●	○	●	●	
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	PSB-D	●	●	○	●	●	
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	PSB-P	●	●	○	●	●	
Move	' 11/08 (H23/08) -' 11/11 (H23/11)	Tachometer	●	●	○	●	●	
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	A/B	●	●	○	○	○	Check Mode
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	CVT	●	●	○	●	●	
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	DSS	●	●	○	●	○	
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	eco IDLE	●	●	○	●	●	
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	EFI	●	●	○	●	●	
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	ITC	●	●	○	●	●	
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	KFS	●	●	○	●	●	
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	PSB-D	●	●	○	●	●	
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	PSB-P	●	●	○	●	●	
Move	' 11/11 (H23/11) -' 12/05 (H24/05)	Tachometer	●	●	○	●	●	
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	A/B	●	●	○	○	○	Check Mode
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	CVT	●	●	○	●	●	
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	DSS	●	●	○	●	○	
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	eco IDLE	●	●	○	●	●	
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	EFI	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	ITC	●	●	○	●	●	
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	KFS	●	●	○	●	●	
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	PSB-D	●	●	○	●	●	
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	PSB-P	●	●	○	●	●	
Move	' 12/05 (H24/05) -' 12/12 (H24/12)	Tachometer	●	●	○	●	●	
Move	' 12/12 (H24/12) -	A/B	●	●	○	○	○	Check Mode
Move	' 12/12 (H24/12) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move	' 12/12 (H24/12) -	CVT	●	●	○	●	●	
Move	' 12/12 (H24/12) -	eco IDLE	●	●	○	●	●	
Move	' 12/12 (H24/12) -	EFI	●	●	○	●	●	
Move	' 12/12 (H24/12) -	EPS	●	●	○	●	○	Check Mode
Move	' 12/12 (H24/12) -	HL AutoLeveling	●	●	○	●	●	
Move	' 12/12 (H24/12) -	ITC	●	●	○	●	●	
Move	' 12/12 (H24/12) -	KFS	●	●	○	●	●	
Move	' 12/12 (H24/12) -	PCB	●	●	○	●	○	
Move	' 12/12 (H24/12) -	Tachometer	●	●	○	●	●	
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	A/B	●	●	○	○	○	Check Mode
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	CVT	●	●	○	●	●	
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	EFI	●	●	○	●	●	
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	ITC	●	●	○	●	●	
Move Conte	' 08/08 (H20/08) -' 09/12 (H21/12)	KFS	●	●	○	●	●	
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	A/B	●	●	○	○	○	Check Mode
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	CVT	●	●	○	●	●	
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	EFI	●	●	○	●	●	
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	ITC	●	●	○	●	●	
Move Conte	' 09/12 (H21/12) -' 11/06 (H23/06)	KFS	●	●	○	●	●	
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	A/B	●	●	○	○	○	Check Mode
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	CVT	●	●	○	●	●	
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	eco IDLE	●	●	○	●	●	
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	EFI	●	●	○	●	●	

Vehicle Name	Year	System Name	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	ITC	●	●	○	●	●	
Move Conte	' 11/06 (H23/06) -' 12/04 (H24/04)	KFS	●	●	○	●	●	
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	A/B	●	●	○	○	○	Check Mode
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	CVT	●	●	○	●	●	
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	eco IDLE	●	●	○	●	●	
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	EFI	●	●	○	●	●	
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	ITC	●	●	○	●	●	
Move Conte	' 12/04 (H24/04) -' 12/05 (H24/05)	KFS	●	●	○	●	●	
Move Conte	' 12/05 (H24/05) -	A/B	●	●	○	○	○	Check Mode
Move Conte	' 12/05 (H24/05) -	ABS/VSC	●	●	○	●	●	Check Mode; Signal Check
Move Conte	' 12/05 (H24/05) -	CVT	●	●	○	●	●	
Move Conte	' 12/05 (H24/05) -	eco IDLE	●	●	○	●	●	
Move Conte	' 12/05 (H24/05) -	EFI	●	●	○	●	●	
Move Conte	' 12/05 (H24/05) -	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Conte	' 12/05 (H24/05) -	ITC	●	●	○	●	●	
Move Conte	' 12/05 (H24/05) -	KFS	●	●	○	●	●	
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	A/B	●	●	○	○	○	Check Mode
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	A/T	●	●	○	●	●	
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	ABS	●	●	○	●	●	Check Mode; Signal Check
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	EFI	●	●	○	●	●	
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	EPS	●	●	○	●	○	Check Mode; Signal Check
Move Latte	' 04/08 (H16/08) -' 08/12 (H20/12)	KFS	●	●	○	●	●	