

MaxiSys_Infiniti_V4.75 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
4WAS (FRONT)	●	●	●	○	●	●	○
4WAS (MAIN) /RAS/HICAS	●	●	●	○	●	●	○
ABS	●	●	●	※	●	●	0002, 0008, 0010, 0012, 0014, 0016, 0018, 0020, 0022, 0024, 0026, 0028, 0030, 0032, 0034, 0036, 0038, 0040, 0042, 0044, 0046, 0048, 0050, 0301, 0329, 0344
ACCELE PEDAL ACT	●	●	●	○	●	●	○
ACTIVE ENG MOUNT	●	●	●	○	●	○	○
ACTIVE SUS	●	●	●	●	●	●	※
ADAPTIVE LIGHT	●	●	●	○	●	●	0009, 0011
AIR BAG	●	●	●	●	●	○	0003, 0005, 0006, 0013, 0015, 0017, 0019, 0021, 0023, 0025
AIR LEVELIZER	●	●	●	○	●	●	0027, 0029, 0031
AIR PRESSURE MONITOR	●	●	●	○	●	●	0033, 0035, 0037
ALL MODE AWD/4WD	●	●	●	○	●	●	0039, 0041, 0043, 0045, 0047, 0049, 0051
ASCD	○	●	●	○	●	○	○
AUTO BACK DOOR	●	●	●	○	●	○	○
AUTO DRIVE POS.	●	●	●	○	●	●	0052, 0054, 0056
AUTO SLIDE DOOR	●	●	●	○	●	※	○
AUTO SLIDE DOOR RIGHT	●	●	●	○	●	●	○
AVM	●	●	●	○	●	●	0053, 0055, 0057, 0059, 0061
BAC	●	●	●	○	●	○	○
BCM	※	●	●	○	●	●	0001, 0063, 0065, 0067, 0069, 0071, 0073, 0075, 0077, 0079, 0081, 0083, 0085, 0087, 0089, 0091, 0093, 0095, 0097, 0099, 0101, 0103, 0105, 0107, 0109, 0111, 0113, 0115, 0117, 0119, 0121, 0123, 0125, 0127, 0129, 0131, 0133, 0135, 0137, 0139, 0141, 0143, 0145, 0147, 0149, 0151, 0153, 0155, 0157, 0159, 0161, 0163, 0165, 0167, 0169, 0171, 0173, 0175, 0177, 0179, 0181, 0183, 0185, 0187, 0189, 0191, 0193, 0195, 0197, 0199, 0201, 0203, 0205, 0207, 0209, 0211, 0213, 0215, 0217, 0219, 0221, 0223, 0225, 0227, 0229
BRAKE	●	●	●	○	●	●	0293
BSW	●	●	●	○	●	●	○
CAN GATEWAY	●	●	●	○	●	○	○
CHA	●	●	●	○	●	●	0058, 0060, 0062
CHARGER	●	●	●	○	●	●	○
CIU	●	●	●	○	●	○	0064

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CONVERTIBLE ROOF	●	●	●	○	●	●	0070, 0072, 0074, 0076, 0078, 0080
Cluster	●	●	●	○	●	●	0066, 0068
DIFF LOCK	●	●	●	○	●	○	○
DISTANCE CONTROL	●	●	●	○	●	○	○
DIU	○	●	●	○	●	○	○
E-4WD	●	●	●	※	●	●	0001
E-SUS	●	●	●	○	●	●	0164, 0166, 0168
EHS/PKB	●	●	●	○	●	●	0293
EMCM	●	●	●	○	●	●	0293
ENGINE	●	●	●	※	●	●	0001, 0082, 0084, 0086, 0088, 0090, 0092, 0094, 0096, 0098, 0100, 0102, 0104, 0106, 0108, 0110, 0112, 0114, 0116, 0118, 0120, 0122, 0124, 0126, 0128, 0130, 0132, 0134, 0136, 0138, 0140, 0142, 0144, 0146, 0148, 0150, 0152, 0294, 0295, 0296, 0297, 0307, 0308, 0310, 0312, 0314, 0315, 0316, 0319, 0321, 0322, 0323, 0324, 0325, 0326, 0327, 0328, 0331, 0334, 0335, 0337, 0339, 0340, 0342, 0343, 0345, 0346, 0347, 0348, 0349, 0351, 0352, 0353, 0355, 0357, 0359,
EPS	●	●	●	○	●	○	0001, 0154, 0156, 0158, 0160, 0162
EV/HEV	●	●	●	●	●	●	0293
HEAD LAMP LEVELIZER	●	●	●	○	●	●	0170, 0172
HV BATTERY	●	●	●	●	●	●	0293
HVAC	●	●	●	○	●	●	0174, 0176, 0178, 0180, 0182, 0184, 0186, 0188, 0190, 0192, 0194, 0196, 0298, 0302, 0304, 0320, 0350
ICC/ADAS	●	●	●	※	●	●	0001, 0198, 0200, 0202, 0204, 0206
INTELLIGENT KEY	●	●	●	○	●	●	0001, 0208, 0210, 0212, 0214, 0216, 0218, 0220, 0222, 0224, 0226, 0228, 0230, 0232, 0234, 0236, 0238, 0240, 0242, 0244, 0246, 0248, 0250, 0252
IPDM E/R	○	●	●	○	●	●	0001
IVMS	●	●	●	○	●	○	○
LANE CAMERA	●	●	●	○	●	●	0231, 0233, 0235
LASER/RADAR	●	●	●	○	●	○	0293
METER/M&A	※	●	●	○	●	○	0001, 0237, 0306, 0330, 0338, 0354
MM CONN	●	●	●	○	●	○	0239
MOTOR ASSIST	○	●	●	○	●	○	0241
MOTOR CONTROL	●	●	●	※	●	○	0293
MULTI AV	※	●	●	○	●	○	0243
MULTI DISPLAY	○	●	●	○	●	●	○
NATS IMMU	○	●	●	○	○	○	○
OCCUPANT DETECTION	○	○	○	○	○	○	0293
POP UP HOOD	●	●	●	○	●	○	0006
PRECRASH SEATBELT	●	●	●	○	●	○	0245
PTC HEATER	●	●	●	○	●	○	○

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
RADIO	●	●	●	○	●	※	0247, 0249
REARVIEW CAMERA	●	○	○	○	●	○	0251, 0253
S/BLIND CAMERA	●	○	○	○	●	○	0255, 0257
SHIFT	●	●	●	○	●	○	0293
SIDE RADAR LEFT	●	●	●	○	●	●	0254
SIDE RADAR RIGHT	●	●	●	○	●	●	0256
SMART ENTRANCE	○	●	●	※	●	※	0001, 0259, 0261, 0263, 0265, 0267, 0269, 0271, 0273, 0275, 0277, 0279, 0281, 0283, 0285, 0287
SONAR	●	●	●	○	●	●	0258, 0260, 0262, 0264, 0266, 0268, 0270
SUB METER	○	●	●	○	○	○	○
SVT	●	●	●	○	●	○	0272
TCS	●	●	●	●	●	●	0293
TELEMATICS	●	●	●	○	●	○	0274, 0276, 0278
TOTAL ILLUM C/U	●	○	○	○	●	○	0280, 0282, 0284, 0286, 0288, 0290, 0291, 0292
TRANSMISSION	●	●	●	※	●	※	0001, 0289, 0299, 0303, 0305, 0309, 0311, 0313, 0317, 0318, 0332, 0333, 0334, 0336, 0341, 0356, 0358
VSP	●	●	●	○	●	○	○
ANC	●	●	●	○	●	○	○
DAST 1	●	●	●	○	●	○	○
DAST 2	●	●	●	○	●	○	○
DCU	●	●	●	○	●	○	○
FSCM	●	●	●	○	●	○	○
IDM	●	●	●	○	●	○	○
PMAS	●	●	●	○	●	○	○

Special_Function

Index	Special Function Name	Index	Special Function Name
0001	CAN DIAG SUPPORT MNTR	0002	C/U INITIALIZATION
0003	ECU DISCRIMINATED NO	0004	SELF FOUNDION CHECK
0005	READ CODES [PAST]	0006	TROUBLE DIAG RECORD
0007	CALIBRATION DATA	0008	BLD HYD UNIT BRK CIRC
0009	LEVELIZER ADJUSTMENT	0010	BLEEDING THE BRAKING SYSTEM
0011	ST ANG SEN ADJUSTMENT	0012	CAR COMPUTER DIAG.
0013	LOCK COMPUTER	0014	CHECK TARGET TEETH
0015	LOCK ECU	0016	DECEL G SEN CALIBRATION
0017	READING IMPACT CONTEXTS	0018	ESP AUTO RECONNECTION THRSH
0019	UNLOCK COMPUTER	0020	ESP SENSOR PROGRAMMING
0021	UNLOCK ECU	0022	LONGITUDINAL ACCEL SEN
0023	WRITE VIN	0024	MEMORY ERASING
0025	Write date of last after sales OPE	0026	PRESS SEN CALIBRATION
0027	ADJUST HEIGHT INI	0028	SIDE G SEN CALIBRATION
0029	CLEAR HEIGHT INI	0030	SPEEDO INDEX
0031	STANDARD HEIGHT LEVEL	0032	ST ANGLE SENSOR ADJUSTMENT
0033	ID REGIST	0034	STEERING WHL ANGLE SEN
0035	ID READ	0036	TACHOMETRIC INDEX
0037	SWITCH TPMS BETWEEN ON/OFF	0038	TEST MODE
0039	ETS AIR BLEEDING	0040	TEST MODE END
0041	LOCK SLEEVE SENSOR INITIALIZE	0042	TEST MODE EXTEN
0043	LOCK SLEEVE SENSOR LEARNING	0044	VEH. SPEED AT INITIALISATION
0045	OIL DETERIORATION INFO RESET	0046	VEHICLE PARAMETERS
0047	START CALIBRATION	0048	WRITE VIN
0049	UNIT CHARACTERISTICS DATA	0050	Write date of last after sales OPE
0051	UNIT CHARACTERISTICS WRITE	0052	EXIT SEAT SLIDE SETTING
0053	INITIALIZE CAMERA IMAGE CALIBRATION	0054	EXIT TILT SETTING
0055	NON-VIEWABLE AREA REMINDER	0056	SEAT SLIDE VOLUME SET
0057	PREDICTIVE COURSE LINE DISPLAY	0058	ERASE OVERHEAT COUNTER
0059	SELECT LANGUAGE OF WARNING MESSAGE	0060	ERS INCRRCT CRNKG CNTR
0061	STEERING ANGLE SENSOR ADJUSTMENT	0062	WRITE VIN
0063	ANS BACK I-KEY LOCK	0064	WRITE VIN
0065	ANS BACK I-KEY UNLOCK	0066	WRITE VIN
0067	ANSWER BACK FUNCTION	0068	FUEL GAUGE CALIBRATION
0069	ANTI KEY LOCK IN FUNCTI	0070	FLIPPER DOOR
0071	ANTI-LOCK OUT SET	0072	ROOF LATCH
0073	AUT D-LK SET	0074	ROOF STATE LEARNING
0075	AUTO LIGHT LOGIC SET	0076	ROOF STATE RESET
0077	AUTO LOCK SET	0078	ROOF/TRUNK/PARCEL SHELF
0079	AUTOMATIC DOOR LOCK SELECT	0080	TRUNK OPENER
0081	AUTOMATIC DOOR UNLOCK SELECT	0082	A/F INITIAL LEARNING
0083	AUTOMATIC LOCK/UNLOCK SELECT	0084	A/F SEN 1 LEARN CLR
0085	BATTERY SAVER SET	0086	A/F SEN 2 LEARN CLR
0087	COMPUTER CONFIGURATION	0088	A/F SEN LEAN CLR
0089	CONFIRM DONGLE ID	0090	AP POS LEARN CLR
0091	CONFIRM KEY FOB ID	0092	CHECK FUEL LINES
0093	CUSTOM A/LIGHT SETTING	0094	CLSD THL POS LEARN
0095	D/LOCK VHCL SPD AJT	0096	CML B/DCHRG CRNT CLEAR
0097	DEADLOCKING	0098	CO ADJUSTMENT
0099	DOOR LOCK-UNLOCK SET	0100	CONFIG CLR
0101	DROP WIPE FUNC SET	0102	DECREMENT IDLE SPEED
0103	DTRL	0104	DF EXH PRES SEN LEARN CLR
0105	ENGINE START BY I-KEY	0106	DIF EX PRE LRN CLR
0107	ERASE COMPUTER MEMORY	0108	DPF DATA CLEAR
0109	FLASHING BUZZER	0110	DPF DATA CLEAR
0111	HAZARD ANSWER BACK	0112	E/R AIR TEMP SEN LEARN CLR
0113	HAZARD LAMP SET	0114	EGR ADAPTIVES
0115	HEAD LIGHT TIMER	0116	EGR/V LEARN CLR
0117	HEADLAMP WASHER AUTO SET	0118	ENTER INJCTR CALIB DATA
0119	HORN CHIRP SET	0120	ETHANOL M/R ADJ
0121	HORN WITH KEYLESS LOCK	0122	EVAP SYSTEM CLOSE

Index	Special Function Name	Index	Special Function Name
0123	ID READ	0124	EXH FUEL INJ DATA CLEAR
0125	ID REGIST	0126	EXH PRSR SEN LEARN CLEAR
0127	ILL DELAY SET	0128	EXH V/T CONTROL LEARN
0129	INSIDE ANT DIAGNOSIS	0130	FUEL INJ QUANTITY LEARNING
0131	INSTRUMENT PANEL TYPE	0132	FUEL PRESSURE RELEASE
0133	INTELLIGENT KEY LINK SET	0134	G SENSOR CALIBRATION
0135	LO-BATT OF KEY FOB WARN	0136	IDLE AIR VOL LEARN
0137	LOCK/UNLOCK BY I-KEY	0138	IGNITION TIMING ADJ
0139	MULTI ANSWER BACK SET	0140	INCREMENT IDLE SPEED
0141	OVERSPEED FUNC-ARABIA	0142	INJ ADJ VAL CLR
0143	PANIC ALARM SET	0144	INJ ADJ VAL REGIST
0145	PW DOWN SET	0146	PTO REGISTRATION
0147	R LAMP TIMER LOGIC SET	0148	READ VIN
0149	RAIN SEN WIP FUNC SET	0150	VIN REGISTRATION
0151	REMO CONT ID CONFIR	0152	WRITE V. I. N.
0153	REMO CONT ID ERASUR	0154	COMPUTER CALIBRATION
0155	REMO CONT ID REGIST	0156	SENSOR CALIBRATION
0157	RESET SETTING VALUE	0158	ST/ANGLE ADJUSTMENT
0159	RETAINED PWR SET	0160	WRITE DATE OF AFTER SALES OPERATION
0161	RETRACTABLE MIRROR SET	0162	WRITE VIN
0163	ROOM LAMP BAT SAV SET	0164	STANDARD HEIGHT LEVEL
0165	ROOM LAMP OFF TIME SET	0166	ADJUST HEIGHT INI
0167	ROOM LAMP ON AT LOCK	0168	CLEAR HEIGHT INI
0169	ROOM LAMP ON TIME SET	0170	SENSOR CUSTOMIZE
0171	ROOM LAMP TIMER SET	0172	SENSOR INITIALISE
0173	RR WIP RVRS SET	0174	AIR FLOW REDUCTION SETTING
0175	SECURITY ALARM SET	0176	AIR INLET CHANGE SETTING
0177	SECURITY ALARM SET (SIREN)	0178	BLOW SET
0179	SECURITY DOOR LOCK SET	0180	CLEAN SW SET
0181	SET I/L D-UNLCK INTCON	0182	Door Motor Starting Position Reset
0183	SET R/DEF -ENG INTCON	0184	FRE MEMORY SET
0185	SHORT CRANKING OUTPUT	0186	GAS SENSOR ADJUSTMENT
0187	SIREN SET	0188	REAR TEMP SET CORRECT
0189	ST ANG SEN ADJUSTMENT	0190	REC MEMORY SET
0191	SWITCH MONITOR	0192	STOP/START SYSTEM OPERATION COND SETTING
0193	SWITCH TPMS BETWEEN On/Off	0194	TARGET EVAPORATOR TEMP UPPER LIMIT SETTING
0195	THEFT ALM TRG	0196	TEMP SET CORRECT
0197	TRUNK OPEN DELAY	0198	CAUSE OF AUTO-CANCEL
0199	TRUNK OPEN SET	0200	CAUSE OF AUTO-CANCEL 1
0201	TRUNK/GLASS HATCH OPEN	0202	CAUSE OF AUTO-CANCEL 2
0203	TYPE E2	0204	CAUSE OF AUTO-CANCEL 3
0205	TYPE E4	0206	LASER BEAM ADJUST
0207	TYPE N2	0208	ANSWER BACK FUNCTION
0209	TYPE N2 (SPECIFIC TO RUSSIA)	0210	ANSWER BACK WITH I-KEY LOCK
0211	TYPE N2 (SPECIFIC TO VENEZUELA COLOMBIA)	0212	ANSWER BACK WITH I-KEY UNLOCK
0213	TYPE N3	0214	ANTI KEY LOCK IN FUNCTION
0215	TYPE N4	0216	AUTO RELOCK TIMER
0217	TYPE N4 (SPECIFIC TO VENEZUELA COLOMBIA)	0218	CONFIRM KEY FOB ID
0219	TYPE N5	0220	ENGINE START BY I-KEY
0221	UCH TYPE	0222	HAZARD ANSWER BACK
0223	WELCOME LIGHT SELECT	0224	HORN WITH KEYLESS LOCK
0225	WELCOME LIGHT OP SET	0226	I-KEY FUNCTION
0227	WIPER SPEED SETTING	0228	KEYLESS FUNCTION
0229	WRITE V. I. N.	0230	LOCK/UNLOCK BY I-KEY
0231	AIM CHECK	0232	LOW BATT OF KEY FOB WARN
0233	AUTO AIM	0234	LUG ROOM ENGINE START
0235	CAUSE OF AUTO-CANCEL	0236	P/W DOWN DELAY
0237	W/L ON HISTORY	0238	PANIC ALARM DELAY
0239	WRITE VIN	0240	POWER SLIDE DOOR DELAY
0241	CALIBRATE ALL	0242	REGIST KEY FOB ID
0243	WRITE VIN	0244	SELECTIVE UNLOCK FUNCTION
0245	DOOR OPENING RETRACT RETRY	0246	SHORT CRANKING OUTPUT
0247	WRITE DATE OF AFTER SALES OPERATION	0248	TAKE OUT FROM WINDOW WARN
0249	WRITE VIN	0250	TRUNK OPEN DELAY

Index	Special Function Name	Index	Special Function Name
0251	SELCT GUIDELINE PATTERN	0252	TRUNK/GLASS HATCH OPEN
0253	ADJ GUIDELINE POSITION	0254	ACTIVATE OPERATION
0255	SELCT GUIDELINE PATTERN	0256	ACTIVATE OPERATION
0257	ADJ GUIDELINE POSITION	0258	CENTER SEN DISTANCE SET
0259	AUDIBLE TRAILER WARNING	0260	CORNER SEN DISTANCE SET
0261	AUTO RE-LOCK	0262	PARKING WIDTH LEVEL SETTING
0263	AUTO-RE ARM	0264	TIRE DIAMETER ADJUSTMENT
0265	KEY REMINDER	0266	TRAILER HITCH MODE
0267	KEYLESS CHECK	0268	VOLUME SETTING
0269	KEYLESS DI FLASH	0270	WRITE VIN
0271	KEYLESS REGISTRATION	0272	SVT SETTING
0273	LASTEST ALARM TRIGGER	0274	TCU ACTIVATE SETTING
0275	OLDEST ALARM TRIGGER	0276	SAVE VIN DATA
0277	PRE-ARM FAST FLASH	0278	WRITE VIN DATA
0279	PREVIOUS ALARM TRIGGER	0280	AMBIENCE LAMP FADE-IN/OUT
0281	SELECTIVE UNLOCK	0282	E/G SW ILL HEART BEAT FUNCTION
0283	SIREN FITTED	0284	E/G SW ILLUMI FADE-IN/OUT
0285	THEFT WARNING	0286	FOOT LAMP FADE-IN/OUT
0287	TRUNK OPEN DELAY	0288	HSPL ILLUMINATION FADE-IN/OUT
0289	WRITE VIN	0290	MAP&PERSNL LAMP FADE-IN/OUT
0291	PUDDLE LAMP FADE-IN/OUT	0292	MOOD LAMP FADE-IN/OUT
0293	Work Support	0294	AFTER DPF REGENERATION
0295	AFTER DPF REPLACEMENT	0296	AFTER PARTICLE FILTER REGENERATION WITH THE DIAG TOOL.
0297	AFTER REPLACEMENT OF THE PARTICLE FILTER	0298	AROMA SETTING
0299	AUTO-ADAPTIVES	0301	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
0302	BLOWER MOTOR SETTING	0303	CLTH INI CLOSE POS
0304	COMP OPRT SET AT DEF MODE (TIM/RMT CLIMT	0305	CONFORM CVTF DETERIORTN
0306	CUSTOMIZE RESET CONSULT	0307	DIESEL PARTICLE FILTER REGENERATION
0308	ECU MEMORY	0309	EEPROM CLEAR CONFIRM
0310	EGR VALVE	0311	ELECTRIC O. P. AIR BLEEDING
0312	ENGINE ADAPTIVES	0313	ENGINE BRAKE ADJ.
0314	ENGINE OIL DILUTION DATA RESET	0315	ENGINE OIL OXIDATION DATA RESET
0316	ENTER INJECTOR CODES	0317	ERASE LEARNING VALUE
0318	ERASE MEMORY DATA	0319	FAST IDLE SPEED MODIFICATION
0320	FRAGRANCE SETTING	0321	FUEL SPLY PREV
0322	HEATER PLUGS	0323	High pressure fuel circuit fault finding
0324	INCREMENT OF IDLE SPD	0325	INJECTOR
0326	INLET FLAP	0327	LOCK INJECTOR CONTROL
0328	LOCK INJECTOR CTRL	0329	LONGITUDINAL ACCELERATION SENSOR
0330	OUTSIDE AIR TEMPERATURE DIAGNOSIS	0331	PRESSURE REGULATION ADAPTIVES
0332	PRG CLUTCH CLOSE POS	0333	PROGRAM SLIP POINT
0334	PROGRAMMED VALUES	0335	PUMP PRESSURE REGULATOR TYPE
0336	Programming selection/engaging zones	0337	REPLACE DIESEL PARTICULATE FILTER
0338	RESET GUIDELINE POSITION	0339	RESET INJCTR ADAPTATIVE
0340	RESET PUMP FORCEFEEDING	0341	Reinit. extreme cold REV gear ENGAGE
0342	SAVING DATA FOR REPLC CPU	0343	SELF-LEARNING CONT
0344	STEERING WHEEL ANGLE SENSOR	0345	STP FUEL SPLY PREV
0346	STRT OPRTN CNTR CLEAR	0347	SUB-STARTER & GENERATOR OPER COUNT CLEAR
0348	TARGET IDLE RPM ADJ	0349	TARGET IGN TIM ADJ
0350	TARGET MAX RPM ADJ AT PRE-CLIMATE	0351	THERMOPLUNGER
0352	TP SW/TP SEN IDLE POSI ADJ	0353	TURBOCHARGER PROGRAMMING
0354	TURN SIGNAL BUZZER DIAGNOSIS	0355	VALVE TIMING OFFSET DATA CLEAR
0356	WRITE DATE NEW CLTH FIT	0357	WRITING DATA FOR REPLC CPU
0358	WRTE CLTH INI CLOSE POS	0359	ZFC VALUE RESET