

MaxiSys_Perodua_V1.30 Function List (Note:For reference only)

NOTES:

● This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported. ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle Type	System Name	subSystem Name	EcuInfo.	ReadCodes	EraseCodes	LiveData	Actuator	SpecialFunction
KEMBARA	ENGINE	ENGINE (HC-E/J100/Aug. 98-May. 03)	○	●	●	●	○	
KEMBARA	ENGINE	ENGINE (K3-VE/J102/May. 03-)	○	●	●	●	●	
KEMBARA	A/T	A/T (K3-VE/J102/May. 03-)	○	●	●	●	●	
KEMBARA	ABS	ABS (K3-VE/J102/May. 03-)	○	●	●	●	●	
KEMBARA	SRS	SRS (K3-VE/J102/May. 03-)	●	●	●	●	●	
KENARI	ENGINE	ENGINE (EJ-DE/L901/Jun. 04-)	○	●	●	●	○	
KENARI	ENGINE	ENGINE (EJ-DE/L901/Jun. 00-Jun. 04)	○	●	●	●	●	
KENARI	ENGINE	ENGINE (EJ-VE/L901/Oct. 00-)	●	●	●	●	●	
KENARI	IMMOBILIZER	IMMOBILIZER (EJ-VE/L901/Oct. 00-)	●	●	●	●	●	
KELISA	ENGINE	ENGINE (EJ-DE/L701/Aug. 01-Oct. 03)	○	●	●	●	○	
KELISA	ENGINE	ENGINE (EJ-DE/L701/Oct. 03-)	○	●	●	●	●	
KELISA	ENGINE	ENGINE (ED-DE/L703/Oct. 03-)	○	●	●	●	●	
KELISA	ENGINE	ENGINE (EJ-VE/L701/Dec. 01-)	○	●	●	●	●	
KELISA	IMMOBILIZER	IMMOBILIZER (EJ-VE/L701/Dec. 01-)	●	●	●	●	●	
KANCIL	ENGINE	ENGINE (ED-DE/L201/JUN. 04-)	○	●	●	●	●	
MYVI	ENGINE	ENGINE (EJ-VE/M302/May. 05-)	○	●	●	●	●	
MYVI	ENGINE	ENGINE (K3-VE/M301/May. 05-)	○	●	●	●	●	
MYVI	A/T	A/T (K3-VE/M301/May. 05-)	○	●	●	●	●	4
MYVI	ABS	ABS (EJ-VE/M302/May. 05-)	○	●	●	●	●	
MYVI	ABS	ABS (K3-VE/M301/May. 05-)	○	●	●	●	●	
MYVI	SRS	SRS (EJ-VE/M302/May. 05-)	○	●	●	○	○	
MYVI	SRS	SRS (K3-VE/M301/May. 05-)	○	●	●	○	○	
MYVI	IMMOBILIZER	IMMOBILIZER (EJ-VE/M302/May. 05-)	○	●	●	●	○	
MYVI	IMMOBILIZER	IMMOBILIZER (K3-VE/M301/May. 05-)	○	●	●	●	○	

Special_Function

Index	Special_Function	Index	Special_Function
1	SIEMENS IMMOBILIZER KEY CODING	2	SIEMENS IMMOBILIZER KEY CLEAR
3	Actuator Test	4	ECU RESET
5	FIRST INITIALISATION	6	ADJUST IDLE SPEED MANUAL OR AUTOMATIC P/N
7	ADJUST IDLE SPEED AUTO D	8	VARIANT CODING
9	THROTTLE BODY LEARNING	10	MISFIRE TEST
11	ADJUST IGNITION TIMING	12	FUNCTION CODING
13	CHANGE SETTING LAST CLUTCH REPLACEMENT	14	ALTER IDLE SPEED
15	READ OIL COUNT	16	READ OIL CHANGE DATE
17	READ AFTER SALES DATE	18	WRITE OIL CHANGE DATE
19	WRITE DAT AFTER SALES OPERAT	20	REINIT OIL COUNTER
21	REINIT AUTO ADAPTIVE	22	NOTE OIL COUNT
23	REINIT CONVERTOR LOCKUP ADAPIVE	24	EBC430 REPAIR CYCLE
25	LOCKING OF IGNITION	26	UNLOCKING OF IGNITION
27	READ DATE OF AFTER SALES	28	WRITE DATE OF AFTER SALES
29	CHANGE SETTING LAST SERVICE DATE	30	ERASE MENU PROGRAMMING RESET
31	ERASE MENU INITIALISATION CLUTCH CLOSED POSITION	32	GEAR SHIFTING GRID SELF TEST
33	HYDRAULIC PUMP DISABLE SELF TEST	34	HYDRAULIC PUMP ENABLE SELF TEST
35	BLEED CLUTCH PHASE 1 SELF TEST	36	BLEED CLUTCH PHASE 2 SELF TEST
37	BLEED HYDRAULIC UNIT SELF TEST	38	FORCE NEUTRAL SELF TEST
39	TEST ALL ACTUATORS SELF TEST	40	FORCE REVERSE SELF TEST
41	PURGE PRESSURE ACCUMULATION SELF TEST	42	Repair Bleeding
43	Self Test	44	ATWS LED
45	Alarm System	46	Clear Alarm Trigger History
47	Remote Keyless Entry Initialization	48	Operating Time
49	Learned value reset	50	VIN Writing
51	CVT Oil Degradation level	52	REINITIALISE PROGRAMMING
53	INJ CONTROL LOCKED	54	INJ CONTROL UNLOCKED
55	Repair Bleeding	56	CHANGE SETTING INITIALISATION CLUTCH CLOSED POSITION
57	ERASE MENU RESET CLUTCH KISS POINT	58	