

MaxiSys_SsangYong_V1.20 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

| Vehicle Type | System Name | Sub System | Ecu Info. | Read Codes | Erase Codes | Live Data | Active Test | Special Function |
|--------------|-------------|-------------------------|-----------|------------|-------------|-----------|-------------|--|
| MUSSO | ECM | 2.3 MSE/RATIO | ● | ● | ● | ● | ● | 0037 |
| MUSSO | ECM | 3.2 MSE/RATIO | ● | ● | ● | ● | ● | 0037 |
| MUSSO | TCM | BTRA 4 | ● | ● | ● | ● | ○ | 0039 |
| MUSSO | TCM | BTR BOSCH | ● | ● | ● | ● | ○ | |
| MUSSO | ABS | ABS 5.0 | ● | ● | ● | ● | ● | |
| MUSSO | ABS | ABS-ABD 5.0 | ● | ● | ● | ● | ● | |
| MUSSO | ABS | ABS-EBD 5.3 | ● | ● | ● | ● | ● | |
| MUSSO | ABS | ABD-EBD 5.3 | ● | ● | ● | ● | ● | |
| MUSSO | ABS | ABS 5.3(Running Change) | ● | ● | ● | ● | ● | |
| MUSSO | ECS | ALL | ● | ● | ● | ● | ● | |
| MUSSO | AIRBAG | ALL | ○ | ● | ● | ○ | ○ | |
| MUSSO | TOD | ALL | ○ | ● | ● | ○ | ○ | |
| MUSSO | TCCU(P/T) | ALL | ● | ○ | ○ | ○ | ○ | 0008, 0051 |
| MUSSO | Huber EGR | ALL | ● | ● | ● | ○ | ○ | 0041, 0043, 0045 |
| KORANDO | ECM | 2.3 MSE/RATIO | ● | ● | ● | ● | ● | 0037 |
| KORANDO | ECM | 3.2 MSE/RATIO | ● | ● | ● | ● | ● | 0037 |
| KORANDO | TCM | BTRA 4 | ● | ● | ● | ● | ○ | 0039 |
| KORANDO | TCM | BTR BOSCH | ● | ● | ● | ● | ○ | |
| KORANDO | ABS | ABS 5.0 | ● | ● | ● | ● | ● | |
| KORANDO | ABS | ABS-ABD 5.0 | ● | ● | ● | ● | ● | |
| KORANDO | ABS | ABS-EBD 5.3 | ● | ● | ● | ● | ● | |
| KORANDO | ABS | ABD-EBD 5.3 | ● | ● | ● | ● | ● | |
| KORANDO | ABS | ABS 5.3(Running Change) | ● | ● | ● | ● | ● | |
| KORANDO | ECS | ALL | ● | ● | ● | ● | ● | |
| KORANDO | AIRBAG | ALL | ○ | ● | ● | ○ | ○ | |
| KORANDO | TOD | ALL | ○ | ● | ● | ○ | ○ | |
| KORANDO | TCCU(P/T) | ALL | ● | ○ | ○ | ○ | ○ | 0008, 0051 |
| KORANDO | Huber EGR | ALL | ● | ● | ● | ○ | ○ | 0041, 0043, 0045 |
| ISTANA | ECM | 2.3 MSE/RATIO | ● | ● | ● | ● | ● | 0037 |
| ISTANA | ABS | ABS 5.0 Free Running | ● | ● | ● | ● | ● | |
| ISTANA | ABS | ABS (TEVES) | ● | ● | ● | ● | ● | 0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031 |

| Vehicle Type | System Name | Sub System | Ecu Info. | Read Codes | Erase Codes | Live Data | Active Test | Special Function |
|--------------|-------------|--------------------------|-----------|------------|-------------|-----------|-------------|--|
| CHAIRMAN | ECM | 3. 6 BOSCH | ● | ● | ● | ● | ● | 0037 |
| CHAIRMAN | ECM | 3. 2 DOHC BOSCH | | ● | ● | ● | | |
| CHAIRMAN | ECM | 2. 3 MSE/RATIO | ● | ● | ● | ● | ● | 0037 |
| CHAIRMAN | ECM | 2. 8 MSE/RATIO | ● | ● | ● | ● | ● | 0037 |
| CHAIRMAN | ECM | 3. 2 MSE/RATIO | ● | ● | ● | ● | ● | 0037 |
| CHAIRMAN | TCM | BTRA 4 | ● | ● | ● | ● | ○ | 0039 |
| CHAIRMAN | TCM | NAG 5 A/T | ○ | ● | ● | ○ | ○ | |
| CHAIRMAN | TCM | DC 5 A/T | ● | ● | ● | ● | ○ | 0004, 0006 |
| CHAIRMAN | ABS | ABS 5. 3(Running Change) | ● | ● | ● | ● | ● | |
| CHAIRMAN | ABS | ABD 5. 3 | ● | ● | ● | ● | ● | |
| CHAIRMAN | ABS | ASR 5. 3 | ● | ● | ● | ● | ● | |
| CHAIRMAN | ABS | TEVES (ABS/ESP) | ● | ● | ● | ● | ● | 0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031 |
| CHAIRMAN | ABS | TEVES (ABS) | ● | ● | ● | ● | ● | 0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031 |
| CHAIRMAN | ECS | VDO | ● | ● | ● | ● | ○ | |
| CHAIRMAN | ECS | SACHS | ● | ● | ● | ● | ○ | |
| CHAIRMAN | AIRBAG | BOSCH | ○ | ● | ● | ○ | ○ | |
| CHAIRMAN | AIRBAG | BOSCH | ○ | ● | ● | ○ | ○ | |
| CHAIRMAN | AIRBAG | SRE-NCS | ○ | ● | ● | ○ | ○ | |
| CHAIRMAN | Power Trank | CHAIRMAN ALL | ● | ● | ● | ○ | ○ | |
| CHAIRMAN | TPMS | CHAIRMAN ALL | ● | ● | ● | ● | ○ | |
| CHAIRMAN | Dual Rekes | CHAIRMAN ALL | ○ | ● | ● | ○ | ○ | |
| CHAIRMAN | IMMOBILIZER | GASOLINE | ○ | ○ | ○ | ○ | ○ | 0008, 0051 |
| CHAIRMAN | IMMOBILIZER | DIESEL | ○ | ○ | ○ | ○ | ○ | 0012, 0010 |
| REXTON | ECM | 2. 3 MSE | ● | ● | ● | ● | ● | 0037 |
| REXTON | ECM | 2. 8 MSE | ● | ● | ● | ● | ● | 0037 |
| REXTON | ECM | 3. 2 MSE | ● | ● | ● | ● | ● | 0037 |
| REXTON | ECM | DSL 2. 7 (C2I) | ● | ● | ● | ● | ● | 0033, 0035, 0047, 0049 |
| REXTON | ECM | DSL 2. 7 (C3I) | ● | ● | ● | ● | ● | 0014, 0018, 0020 |
| REXTON | TCM | BTRA 4 | ● | ● | ● | ● | ○ | 0039 |
| REXTON | TCM | DC 5 A/T | ● | ● | ● | ● | ○ | 0004, 0006 |
| REXTON | ABS | TEVES (ABS/ESP) | ● | ● | ● | ● | ● | 0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031 |
| REXTON | ABS | Bosch | ● | ● | ● | ● | ● | 0001, 0005, 0007, 0009 |
| REXTON | AIRBAG | SRE-NCS | ○ | ● | ● | ○ | ○ | |
| REXTON | AIRBAG | SRE-SMART | ● | ● | ● | ○ | ○ | |
| REXTON | TOD | OLD | ○ | ● | ● | ○ | ○ | |
| REXTON | TOD | NEW | ○ | ● | ● | ● | ○ | |
| REXTON | TCCU | OLD | ● | ○ | ○ | ○ | ○ | 0008, 0051 |
| REXTON | TCCU | NEW | ● | ● | ● | ● | ○ | |

| Vehicle Type | System Name | Sub System | Ecu Info. | Read Codes | Erase Codes | Live Data | Active Test | Special Function |
|---------------|-------------|-----------------|-----------|------------|-------------|-----------|-------------|--|
| REXTON | Huber EGR | All | ● | ● | ● | ○ | ○ | 0041, 0043, 0045 |
| REXTON | SSPS | All | ● | ● | ● | ○ | ○ | |
| REXTON | TPMS | All | ● | ● | ● | ● | ○ | |
| REXTON | TGS Lever | All | ● | ● | ● | ○ | ○ | |
| REXTON | IMMOBILIZER | GASOLINE | ○ | ○ | ○ | ○ | ○ | 0008, 0051 |
| REXTON | IMMOBILIZER | DIESEL | ○ | ○ | ○ | ○ | ○ | 0012, 0010 |
| RODIUS/STAVIC | ECM | DSL D27DT (C2I) | ● | ● | ● | ● | ● | 0014, 0018, 0020 |
| RODIUS/STAVIC | ECM | DSL D27DT (C2I) | ● | ● | ● | ● | ● | 0033, 0035, 0047, 0049 |
| RODIUS/STAVIC | ECM | DSL D27DT (C3I) | ● | ● | ● | ● | ● | 0014, 0018, 0020 |
| RODIUS/STAVIC | ECM | DSL D27DT (C3I) | ● | ● | ● | ● | ● | 0033, 0035, 0047, 0049 |
| RODIUS/STAVIC | ECM | 3. 2 MSE/RATIO | ● | ● | ● | ● | ● | 0037 |
| RODIUS/STAVIC | TCM | DC 5 A/T | ● | ● | ● | ● | | 0004, 0006 |
| RODIUS/STAVIC | ABS | TEVES (ABS/ESP) | ● | ● | ● | ● | ● | 0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031 |
| RODIUS/STAVIC | AIRBAG | SRE-SMART | ● | ● | ● | ○ | ○ | |
| RODIUS/STAVIC | TOD | NEW | | ● | ● | ● | ○ | |
| RODIUS/STAVIC | TCCU | NEW | ● | ● | ● | ● | ○ | |
| RODIUS/STAVIC | TGS Lever | All | ● | ● | ● | ○ | ○ | |
| RODIUS/STAVIC | IMMOBILIZER | GASOLINE | ○ | ○ | ○ | ○ | ○ | 0008, 0051 |
| RODIUS/STAVIC | IMMOBILIZER | DIESEL | ○ | ○ | ○ | ○ | ○ | 0012, 0010 |
| KYRON | ECM | 2. 3 MSE | ● | ● | ● | ● | ● | 0037 |
| KYRON | ECM | 3. 2 MSE | ● | ● | ● | ● | ● | 0037 |
| KYRON | ECM | DSL 2. 0 (C2I) | ● | ● | ● | ● | ● | 0033, 0035, 0002, 0049 |
| KYRON | ECM | DSL 2. 0 (C3I) | ● | ● | ● | ● | ● | 0016, 0018, 0020 |
| KYRON | ECM | DSL 2. 7 (C2I) | ● | ● | ● | ● | ● | 0033, 0035, 0047, 0049 |
| KYRON | ECM | DSL 2. 7 (C3I) | ● | ● | ● | ● | ● | 0014, 0018, 0020 |
| KYRON | TCM | BTRA 4 | ● | ● | ● | ● | ○ | 0039 |
| KYRON | TCM | DC 5 A/T | ● | ● | ● | ● | ○ | 0004, 0006 |
| KYRON | ABS | TEVES (ABS/ESP) | ● | ● | ● | ● | ● | 0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031 |
| KYRON | AIRBAG | SRE-SMART | ● | ● | ● | ○ | ○ | |
| KYRON | TCCU | ALL | ● | ● | ● | ● | ○ | |
| KYRON | SSPS | ALL | ● | ● | ● | ○ | ○ | |
| KYRON | TGS Lever | ALL | ● | ● | ● | ○ | ○ | |
| KYRON | IMMOBILIZER | GASOLINE | ○ | ○ | ○ | ○ | ○ | 0008, 0051 |
| KYRON | IMMOBILIZER | DIESEL | ○ | ○ | ○ | ○ | ○ | 0012, 0010 |
| ACTYON | ECM | 2. 3 MSE | ● | ● | ● | ● | ● | 0037 |
| ACTYON | ECM | DSL 2. 0 (C2I) | ● | ● | ● | ● | ● | 0033, 0035, 0002, 0049 |
| ACTYON | ECM | DSL 2. 0 (C3I) | ● | ● | ● | ● | ● | 0016, 0018, 0020 |
| ACTYON | TCM | BTRA 4 | ● | ● | ● | ● | ○ | 0039 |

| Vehicle Type | System Name | Sub System | Ecu Info. | Read Codes | Erase Codes | Live Data | Active Test | Special Function |
|--------------|-------------|-----------------|-----------|------------|-------------|-----------|-------------|--|
| ACTYON | TCM | DC 5 A/T | ● | ● | ● | ● | ○ | 0004, 0006 |
| ACTYON | ABS | TEVES (ABS/ESP) | ● | ● | ● | ● | ● | 0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031 |
| ACTYON | AIRBAG | SRE-SMART | ● | ● | ● | ○ | ○ | |
| ACTYON | TCCU | ALL | ● | ● | ● | ● | ○ | |
| ACTYON | SSPS | ALL | ● | ● | ● | ○ | ○ | |
| ACTYON | IMMOBILIZER | GASOLINE | ○ | ○ | ○ | ○ | ○ | 0008, 0051 |
| ACTYON | IMMOBILIZER | DIESEL | ○ | ○ | ○ | ○ | ○ | 0012, 0010 |
| KORANDO C | ECM | ALL | ● | ● | ● | ● | ● | 0032, 0034, 0036, 0038, 0040, 0042, 0044, 0046, 0048 |
| KORANDO C | TCM | ALL | ○ | ● | ● | ● | ○ | 0028, 0030 |
| KORANDO C | ABS/ESP | ALL | ● | ● | ● | ● | ● | 0024, 0026, 0050 |
| KORANDO C | E-Coupling | ALL | ● | ● | ● | ● | ○ | |
| KORANDO C | EPS | ALL | ● | ● | ● | ● | ○ | 0022 |
| KORANDO C | BCM | ALL | ● | ● | ● | ● | ○ | |
| KORANDO C | SKM | ALL | ● | ○ | ○ | ● | ○ | |

Special_Function

| Index | Special Function Name | Index | Special Function Name |
|-------|--------------------------------------|-------|-----------------------------------|
| 0001 | Air Bleeding | 0002 | Injector Coding |
| 0003 | Rear right line Air Bleeding(RR) | 0004 | Reset Adaption |
| 0005 | Rear left line Air Bleeding(LR) | 0006 | Read and Write Adaption |
| 0007 | Front left line Air Bleeding(LF) | 0008 | Finger Data |
| 0009 | Front right line Air Bleeding(RF) | 0010 | Key Coding |
| 0011 | Select Sensor Reset Item | 0012 | Key Coding Status |
| 0013 | Pitch G-Sensor (4WD only) | 0014 | C3I 5 Injector Corrections |
| 0015 | Yaw G-sensor | 0016 | C3I 4 Injector Corrections |
| 0017 | Pressure Sensor | 0018 | Engine Variant Coding |
| 0019 | All listed sensors | 0020 | Chassis Variant Coding |
| 0021 | CLEAR VARIANT CODE | 0022 | Steering Reset |
| 0023 | AIR BLEEDING(TEVES) | 0024 | Coding Erase |
| 0025 | Air Bleeding(TEVES) Rear right line | 0026 | Longitudinal acceleration sensor |
| 0027 | Air Bleeding(TEVES) Rear left line | 0028 | TCU Adaptation Reset |
| 0029 | Air Bleeding(TEVES) Front left line | 0030 | TCU Initial hydraulic calibration |
| 0031 | Air Bleeding(TEVES) Front right line | 0032 | Injector Coding |
| 0033 | Leak Detection | 0034 | Engine Variant Coding |
| 0035 | Rail Pressure Reset | 0036 | Chassis Variant Coding |
| 0037 | ECU RESET | 0038 | EGR Position Relearning |
| 0039 | TPS VALUE CLEAR(DIESEL ONLY) | 0040 | Throttle Position Relearning |
| 0041 | Huber EGR VIN Write | 0042 | Swirl Valve Relearning |
| 0043 | Huber EGR Initial | 0044 | Rail Pressure Initialization |
| 0045 | Huber EGR System Reset | 0046 | O2 Sensor Initialization |
| 0047 | Injector Coding | 0048 | VIN Write |
| 0049 | Variant Coding | 0050 | Air Bleeding |
| 0051 | Key Coding | | |