

MaxiSys_Chery New Energy_V2.42 Function List (Note:For reference only)

Notes:

● indicates the function is supported ※ indicates the function may be supported according to actual vehicle conditions

○ indicates the function is not available

Refer to Special Function List for special functions

Model	System	System Type	Read DTCs	Clear DTCs	Retrieve ECU Info.	Read Freeze Frame	Read Live Data	Active Test	Special Function
Chery New Energy QQ3 Electric Vehicle	1: Vehicle Management System	Vehicle Management System	●	●	●	●	●	○	
Chery New Energy QQ3 Electric Vehicle	2: Instrument Cluster System	Instrument Cluster System	●	●	●	○	●	●	0x10、0x1C
Chery New Energy QQ3 Electric Vehicle	3: Power Steering System	Power Steering System	●	●	●	○	●	○	
Chery New Energy QQ3 Electric Vehicle	4: Battery Management System (BMS)	Battery Management System (BMS)	●	●	●	○	●	○	
Chery New Energy S18 Electric Vehicle	1: Vehicle Management System	Vehicle Management System	●	●	●	●	●	○	
Chery New Energy S18 Electric Vehicle	2: ABS	ABS	●	●	●	●	●	○	
Chery New Energy S18 Electric Vehicle	3: Battery Management System (BMS)	Battery Management System (BMS)	●	●	●	○	●	○	
Chery New Energy S18 Electric Vehicle	4: Battery Balance System (BBS)	Battery Balance System (BBS)	●	●	●	○	●	○	
Chery New Energy S18 Electric Vehicle	5: Instrument Cluster System	Instrument Cluster System	●	●	●	○	●	●	0x10、0x1C
Chery New Energy S18 Electric Vehicle	6: Power Steering System	Power Steering System	●	●	●	○	●	○	
Chery New Energy S18 Electric Vehicle	7: Fuel Heater System	Fuel Heater System	●	●	●	○	●	●	0x53
Chery New Energy S18 Electric Vehicle	8: Generator Control System (GCU)	Generator Control System (GCU)	●	●	●	○	○	○	

Specil_Function

Index	Specil Function Name	Index	Specil Function Name
0x01	Version Information	0x2D	Clear Adaptive Tables
0x02	Read DTCs	0x2E	Enter User Authorization Code
0x03	Freeze Frame	0x2F	Authorization Code Setup
0x04	Clear DTCs	0x30	Key Learning
0x05	DataStream	0x31	Remote Key Matching
0x06	Active Test	0x32	Write IQA Code
0x07	Parameter Adjustment	0x33	Zero Point Calibration
0x08	Programming	0x34	Mileage Service
0x09	Special Function	0x35	System Sensor Calibration
0x0A	O2 Sensor Monitoring	0x36	Remote Control Window Up Function
0x0B	End-of-Line Test	0x37	Self-Learning Reset
0x0C	Remote Control Matching	0x38	Routine Control Service
0x0D	Service Lamp Reset	0x39	VVT Function Check
0x0E	Input Code	0x3A	ESC Reconfiguration
0x0F	Immobilizer Matching	0x3B	ESC Special Sensor Calibration
0x10	ECU Reset	0x3C	Write Vehicle Configuration Information
0x11	Configure Warning Lamp	0x3D	Steering Angle Sensor Calibration
0x12	Steering Angle Sensor Calibration	0x3E	O2 Sensor Monitoring Test Result
0x13	Restore Default	0x3F	On-board Monitoring Test Result
0x14	Automatic Bleeding	0x40	Clear Learning Value
0x15	Hydraulic Control Unit Test	0x41	DBW Self-Learning Function
0x16	Bleeding and Filling	0x42	Clutch Related Parameters Reset
0x17	EOBD Module	0x43	IQA Matching
0x18	Bleeding Mode	0x44	VSA Self-Learning
0x19	Write Data	0x45	ECU Internal Data Area Setup
0x1A	Matching Function	0x46	Adaptive Parameters Adjustment
0x1B	Reset Adaptive Value	0x47	Channel Matching
0x1C	Vehicle Service	0x48	Basic Settings
0x1D	Coding	0x49	Security Access
0x1E	Activate Alarm Horn	0x4A	Separately Reading
0x1F	CAN Configuration Selection	0x4B	Shift Self-Learning
0x20	CAN Configuration Input	0x4C	Clutch Self-Learning
0x21	Initialize Tire Location	0x4D	Software Configuration Information Writing
0x22	ISU Reset	0x4E	Vehicle Service Function Reset
0x23	Fast Dormancy	0x4F	Executive Routine
0x24	Shipping Mode	0x50	Inspection/Maintenance Service Readiness Status
0x25	Air Bleeding Function	0x51	O2 Sensor Monitoring Test
0x26	O2 Sensor Test	0x52	Request Monitoring Test
0x27	Engine Test	0x53	Start Heater
0x28	Fuel Injector Matching	0x54	End-of-Line Configuration
0x29	Read Fuel Injector Code	0x55	RKC Reprogramming
0x2A	2-Airbag Automatch	0x56	Anti-pinch Configuration
0x2B	6-Airbag Automatch	0xFE	Service Light
0x2C	VVT Function Check		