

MaxiSys_Subaru_V2.20 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported. ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

System Name	Read Codes	Erase Codes	Live Data	Special Function
Engine Control System	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012, 0013, 0014, 0015, 0016, 0017, 0018, 0019
Transmission Control System	●	●	●	0018, 0019, 0020, 0021, 0031
Brake Control System	●	●	●	0018, 0022, 0023, 0024, 0025, 0026
Airbag System	●	●	●	
Integ.unit mode	●	●	●	0018, 0019, 0027, 0028, 0029
Cruise Control System	●	●	●	
Occupant Detection System	●	●	●	0018, 0019, 0030
Keyless access system	●	●	●	0018, 0019
Power Steering System	●	●	●	
CAN SYSTEM	●	●	●	
Tire Pressure Monitor	●	●	●	
Parking Brake System	●	●	●	
Air Condition System	●	●	●	
Impact Sensor	●	●	●	
Brake Vacuum Pump System	●	●	●	
EyeSight (from 2009MY)	●	●	●	
Adaptive cruise control, radar type	●	●	●	
Automatic Light and Wiper System	●	●	●	
Combination meter	●	●	●	
Multi-function Display	●	●	●	
Auto Start Stop	●	●	●	

System Name	Read Codes	Erase Codes	Live Data	Special Function
Drive Motor Control System	●	●	●	
Hybrid Powertrain Control System	●	●	●	
Battery Energy Control System	●	●	●	
Power Rear Gate	●	●	●	
Automatic Headlight Leveling System	●	●	●	
Immobilizer System	●	●	●	
RADAR ASSY B&S RH	●	●	●	
RADAR ASSY B&S LH	●	●	●	
Infotainment System	●	●	●	
Power Seat Memory Mode	●	●	●	
Telematics System	●	●	●	
EyeSight Assist Monitor	●	●	●	

Special_Function

Index	Specil Function Name	Index	Specil Function Name
0001	Actuator ON/OFF Operation	0002	Immobilizer System
0003	Fuel pump duty learning	0004	Fuel injector injection amount learning
0005	EGR valve opening angle learning	0006	Turbo vanes angle learning
0007	Air flow sensor learning	0008	DPF change
0009	DPF regeneration	0010	Engine oil change
0011	Reading of DPF/engine oil-related learning values: ECM to TOOL	0012	Writing of DPF/engine oil-related learning values: TOOL to ECM
0013	Entry VIN	0014	Injector Code New Registration (TOOL to ECM)
0015	Read Injector Code (ECM to TOOL)	0016	Register the reading code (TOOL to ECM)
0017	Injector Code Display	0018	ECU part No. display
0019	Software information display	0020	Rear differential inspection mode
0021	AWD ON/OFF switching mode	0022	ABS Sequence Control Mode
0023	VDC Check Mode	0024	VSC(VDC) Centering Mode
0025	Mode transition	0026	Brake Maintenance Mode
0027	Keyless ID registration	0028	Keyless ID erasure
0029	SCU forced collation mode	0030	Rezero
0031	Compulsory learning mode		